

FIG. 1

FIG. 1 is a schematic diagram of a telephone device 100. The device includes a handset 104 and a base unit 102. The base unit features a numeric keypad 106 with buttons 1-9, *, and #. Above the keypad is a display 108 showing '313'. To the right of the keypad are three buttons labeled AC1, AC2, and AC3. Below the keypad are three buttons labeled 313, 679, and 202. A bracket 109 groups these three buttons. A bracket 114 groups the *, 0, and # buttons. A bracket 116 groups the AC1, AC2, and AC3 buttons. The base unit is connected to a POTS (Plain Old Telephone Service) line 118 via a connection point 110.

FIG. 2

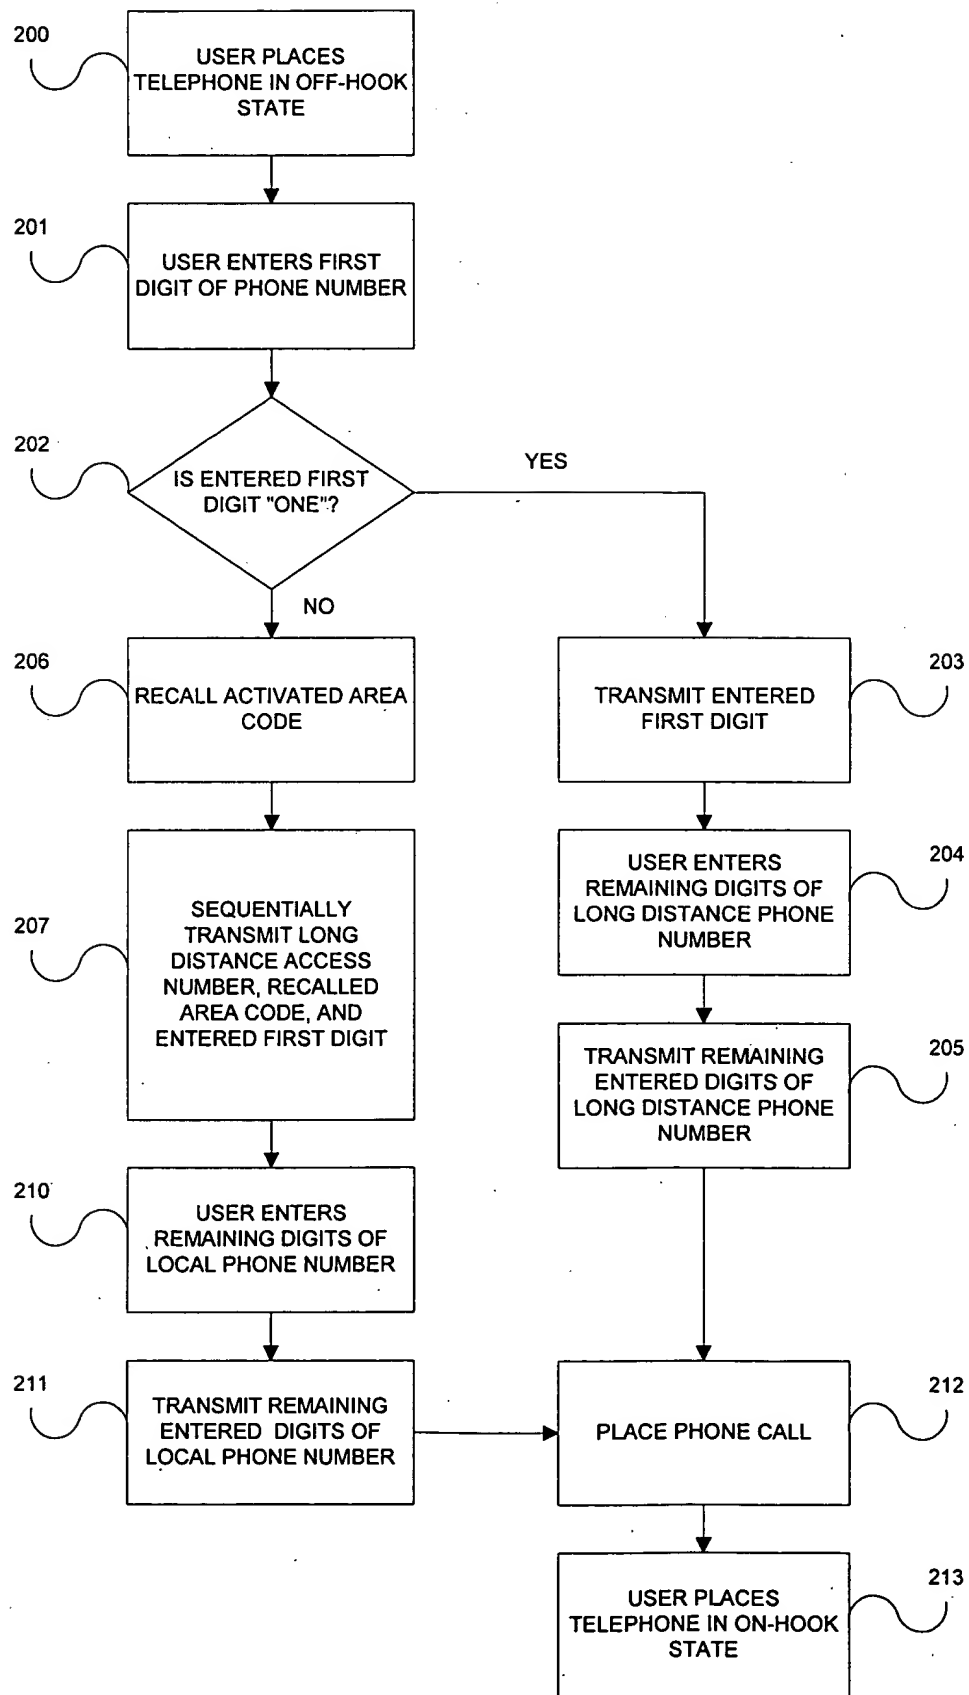


FIG. 3

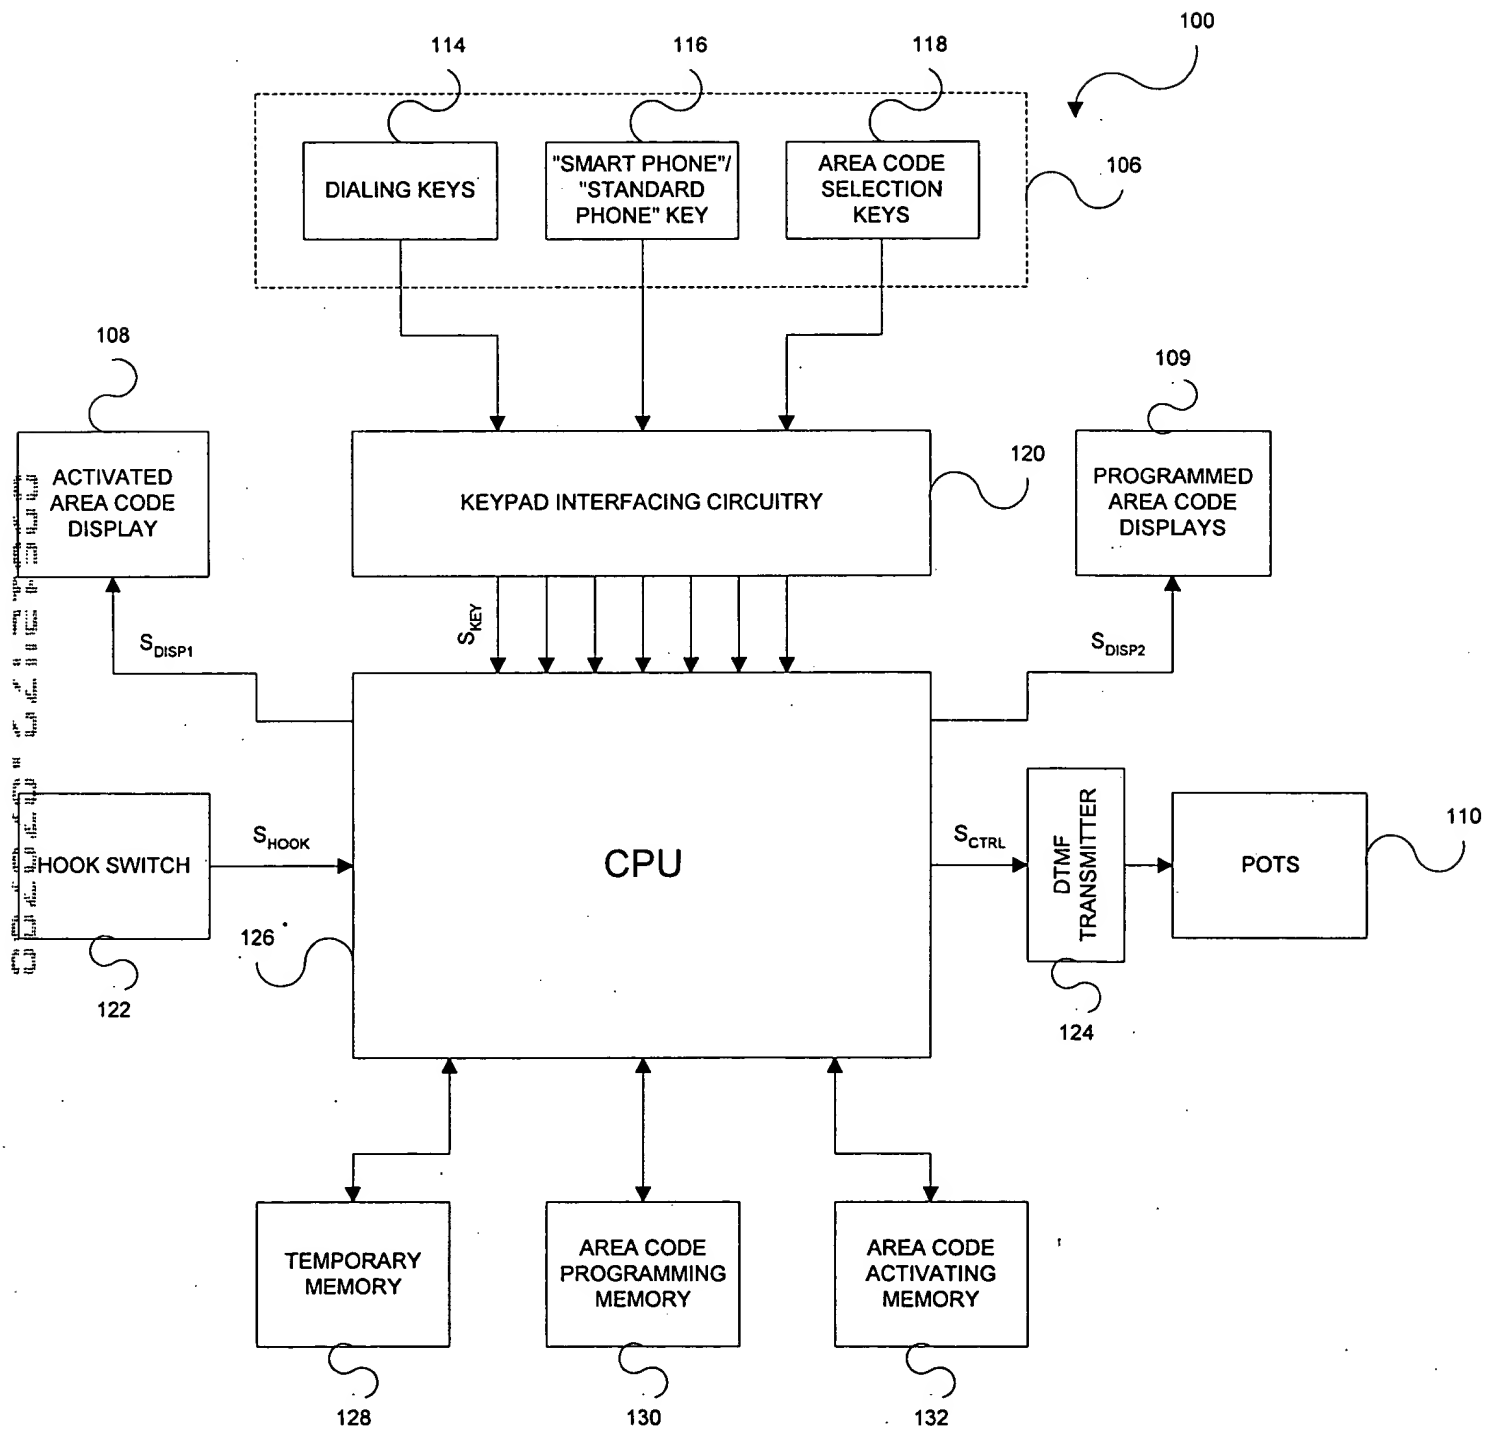
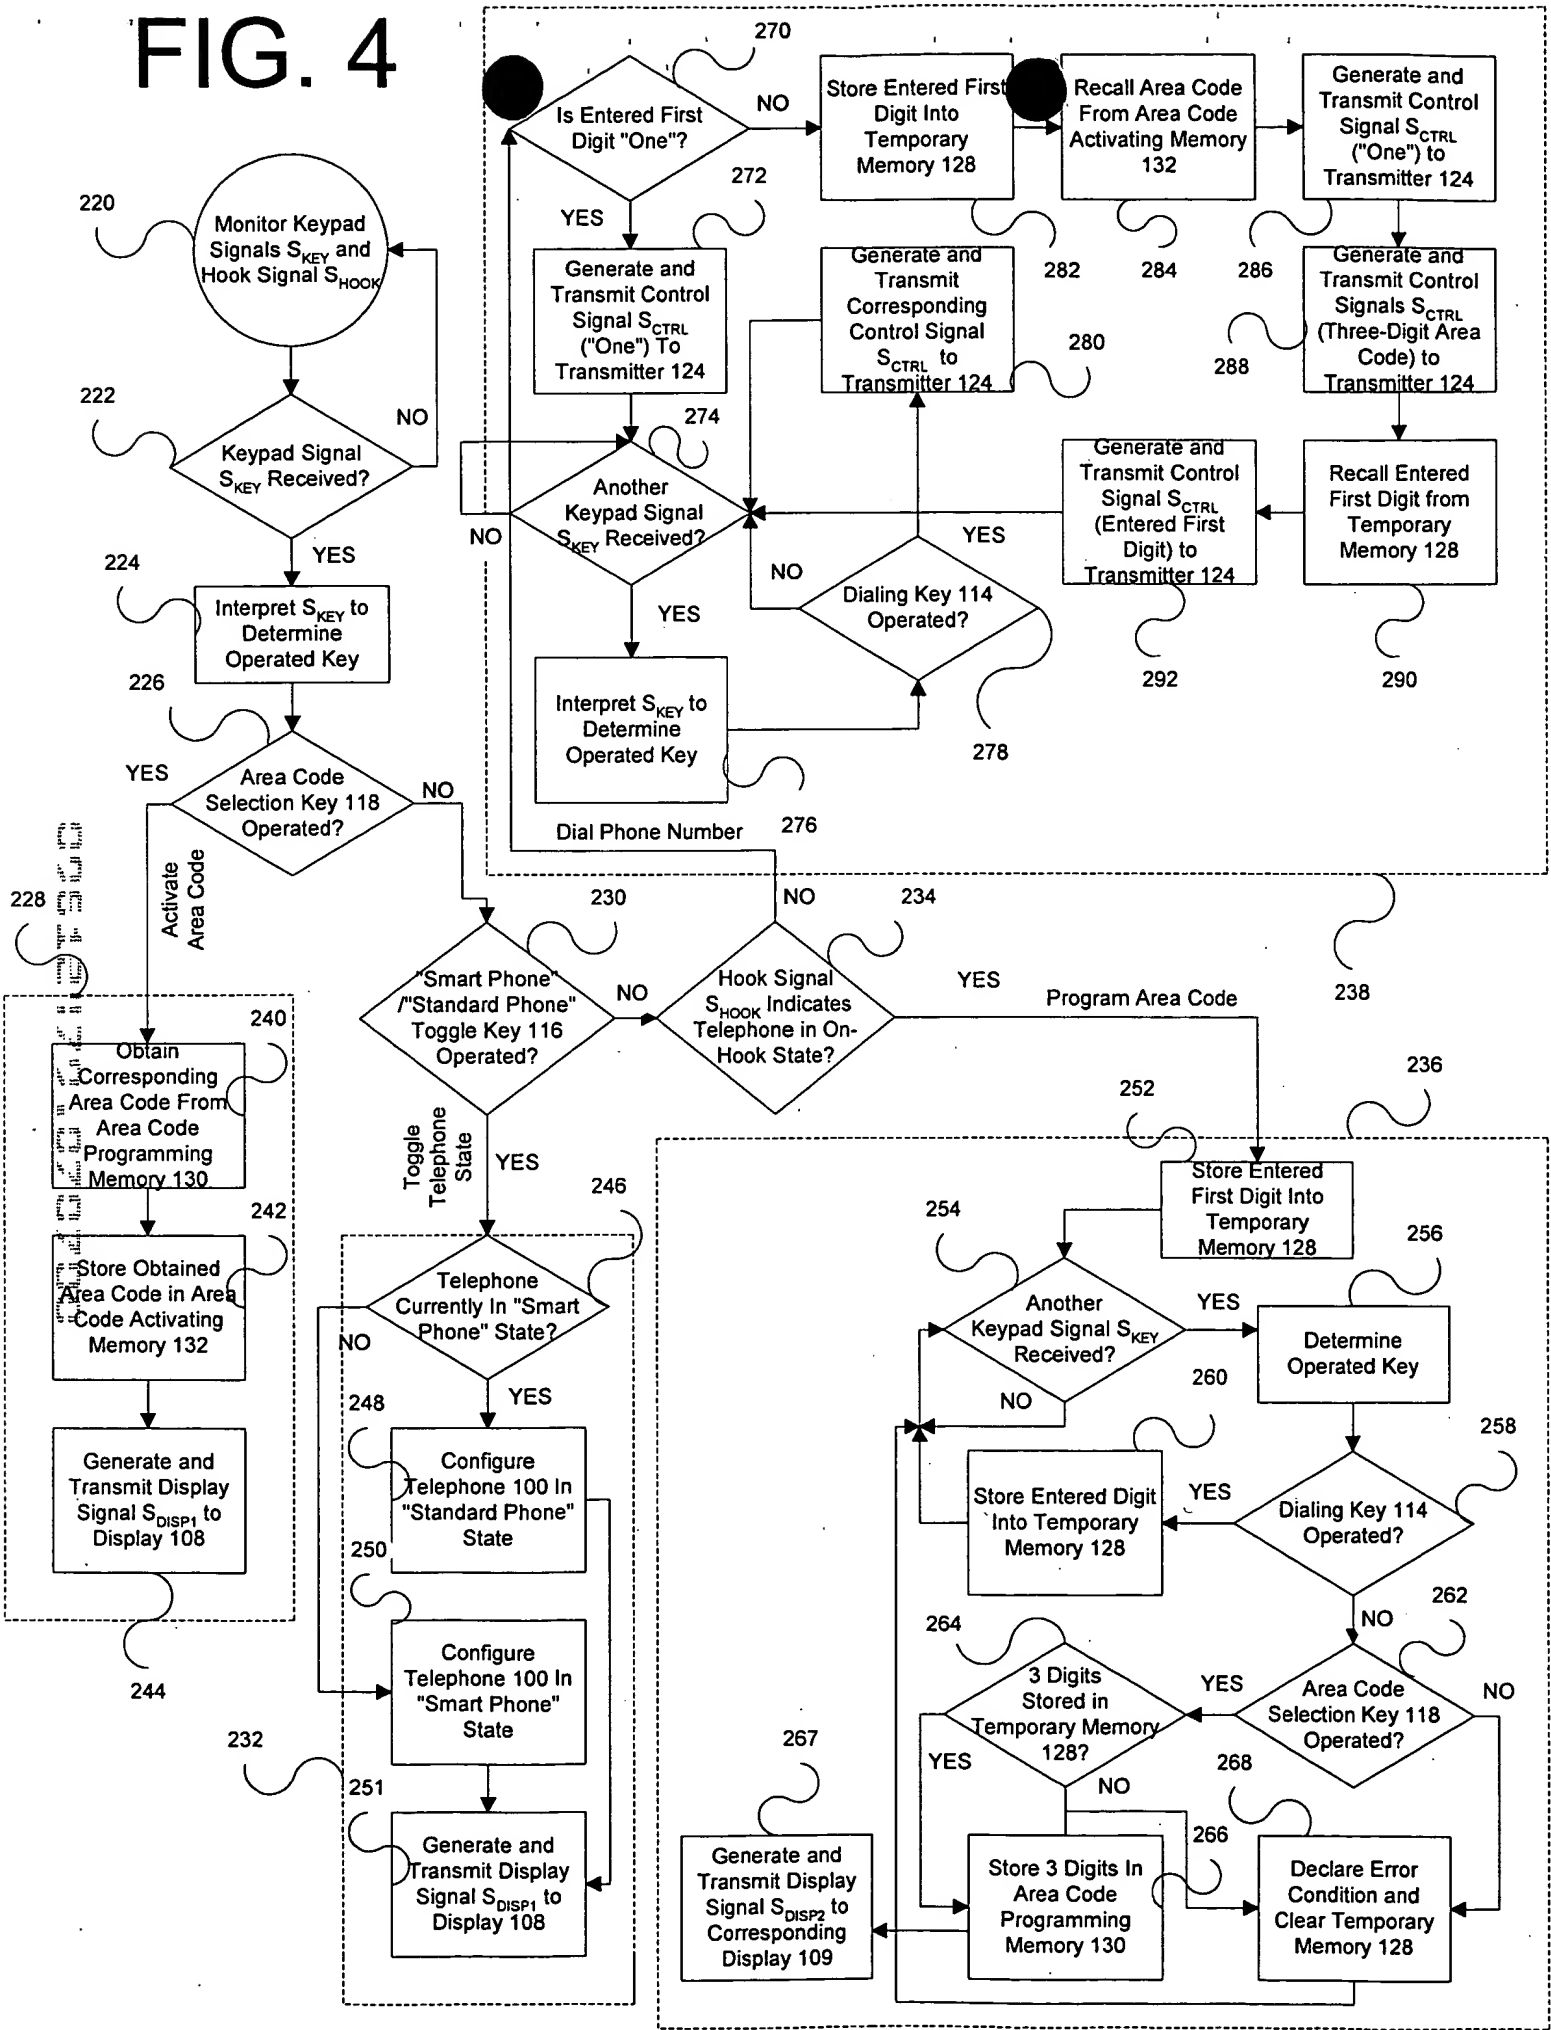


FIG. 4



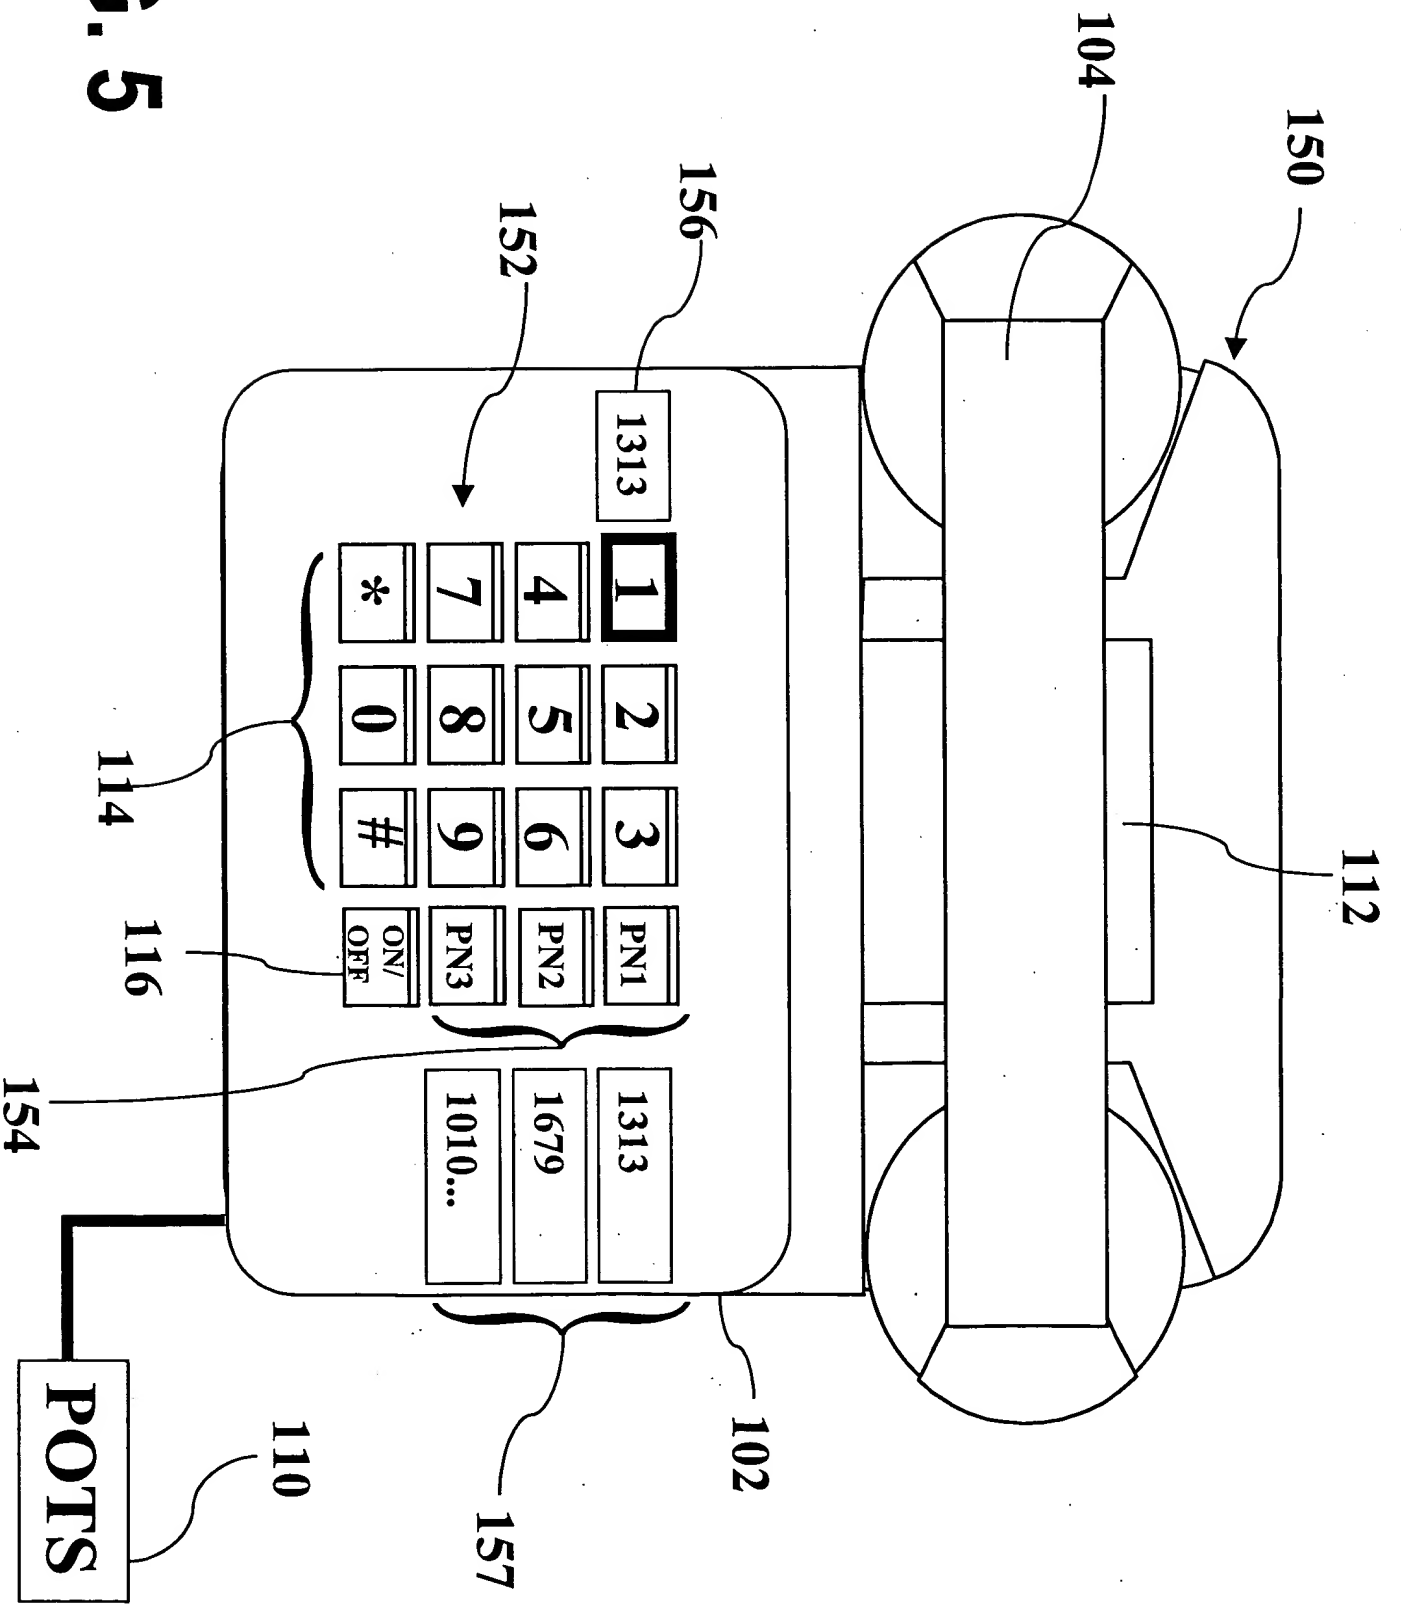


FIG. 5

FIG. 6

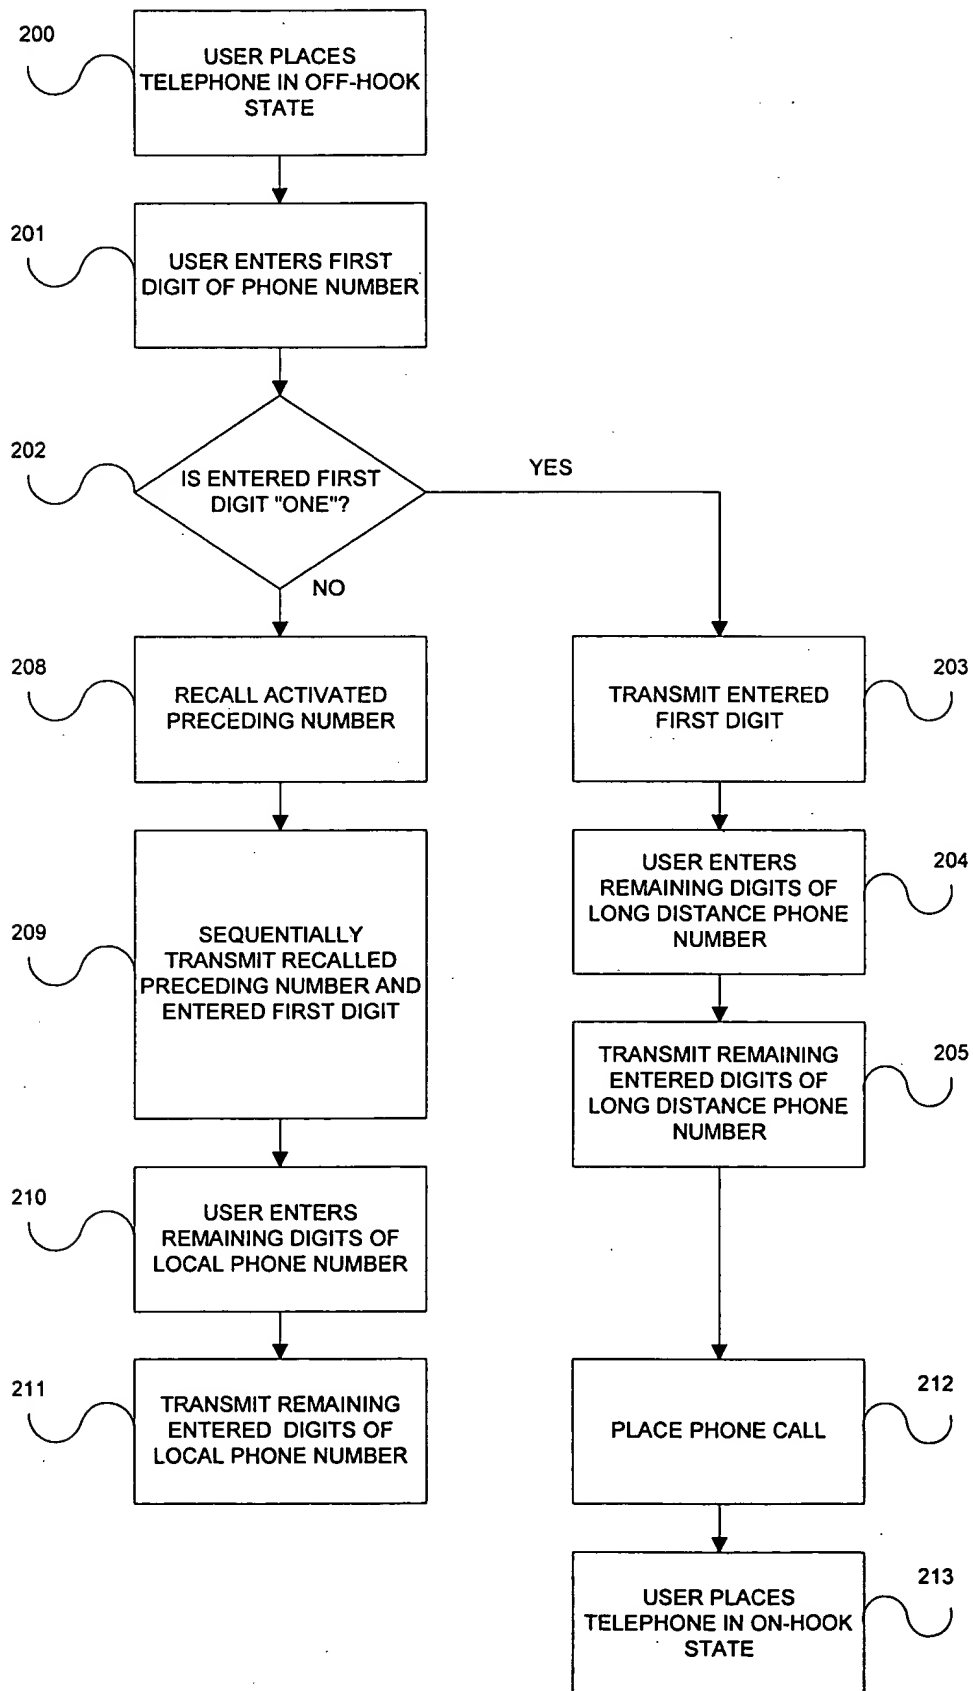


FIG. 7

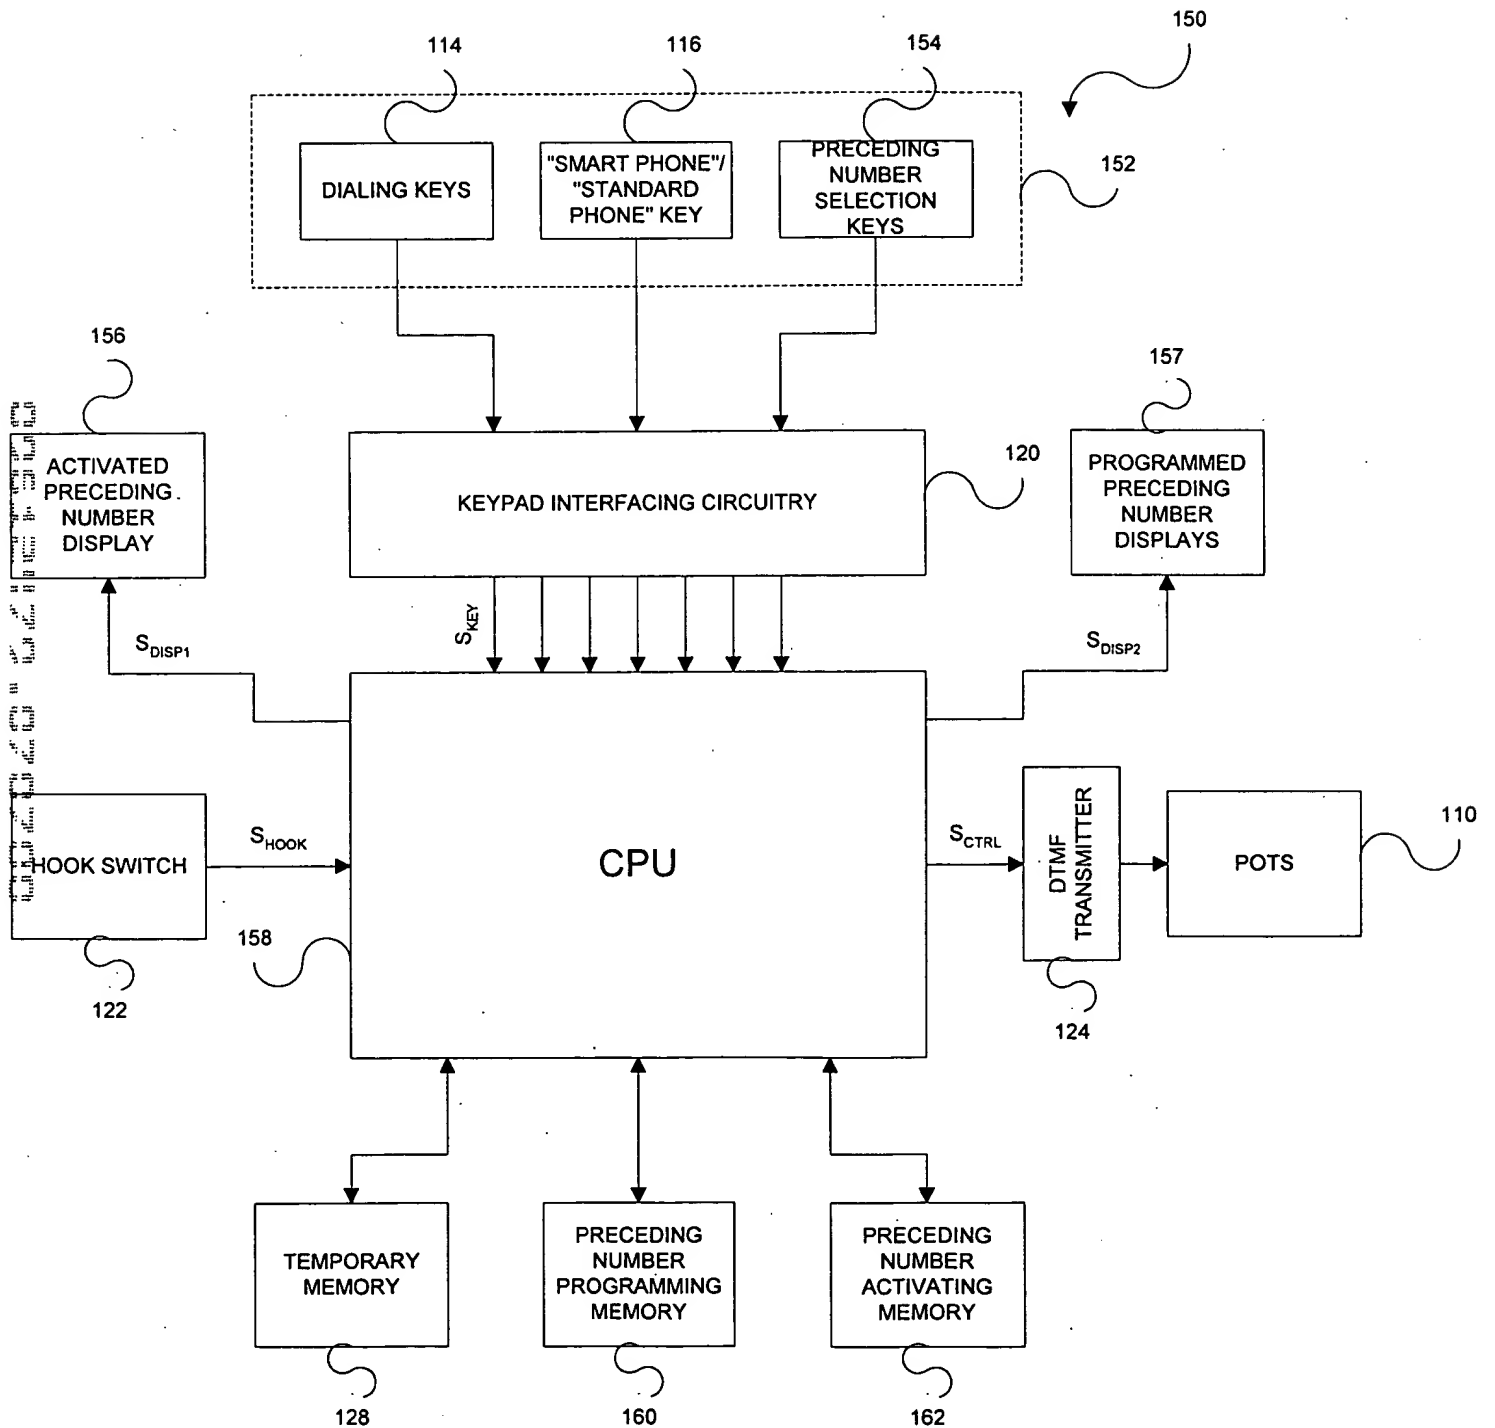
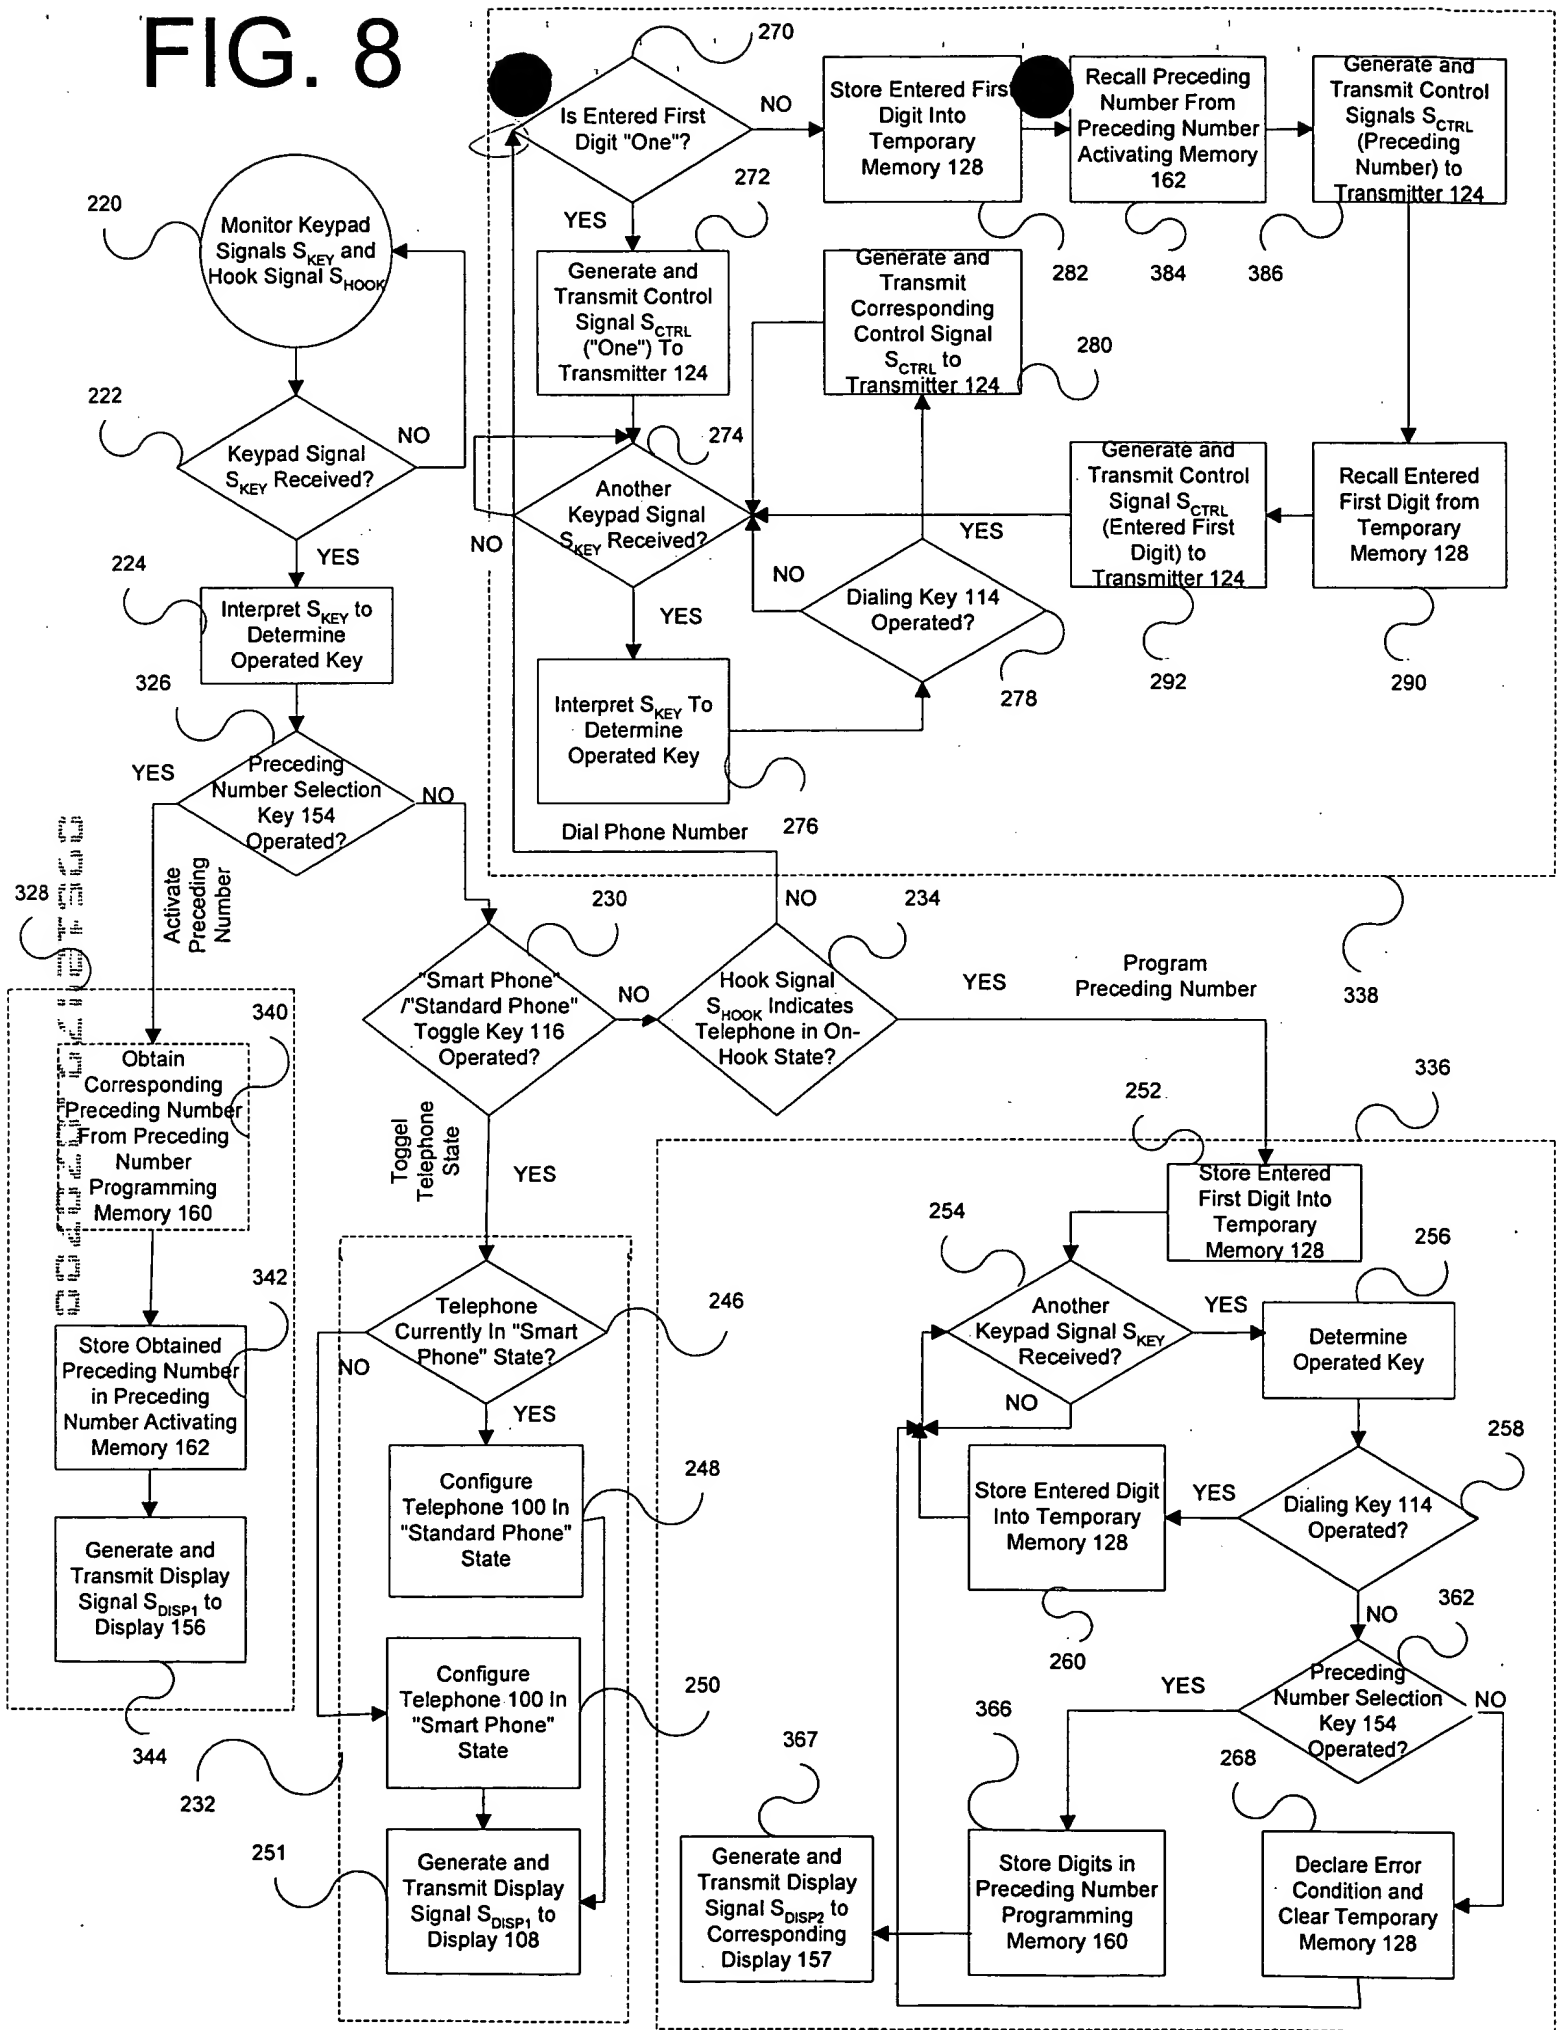


FIG. 8



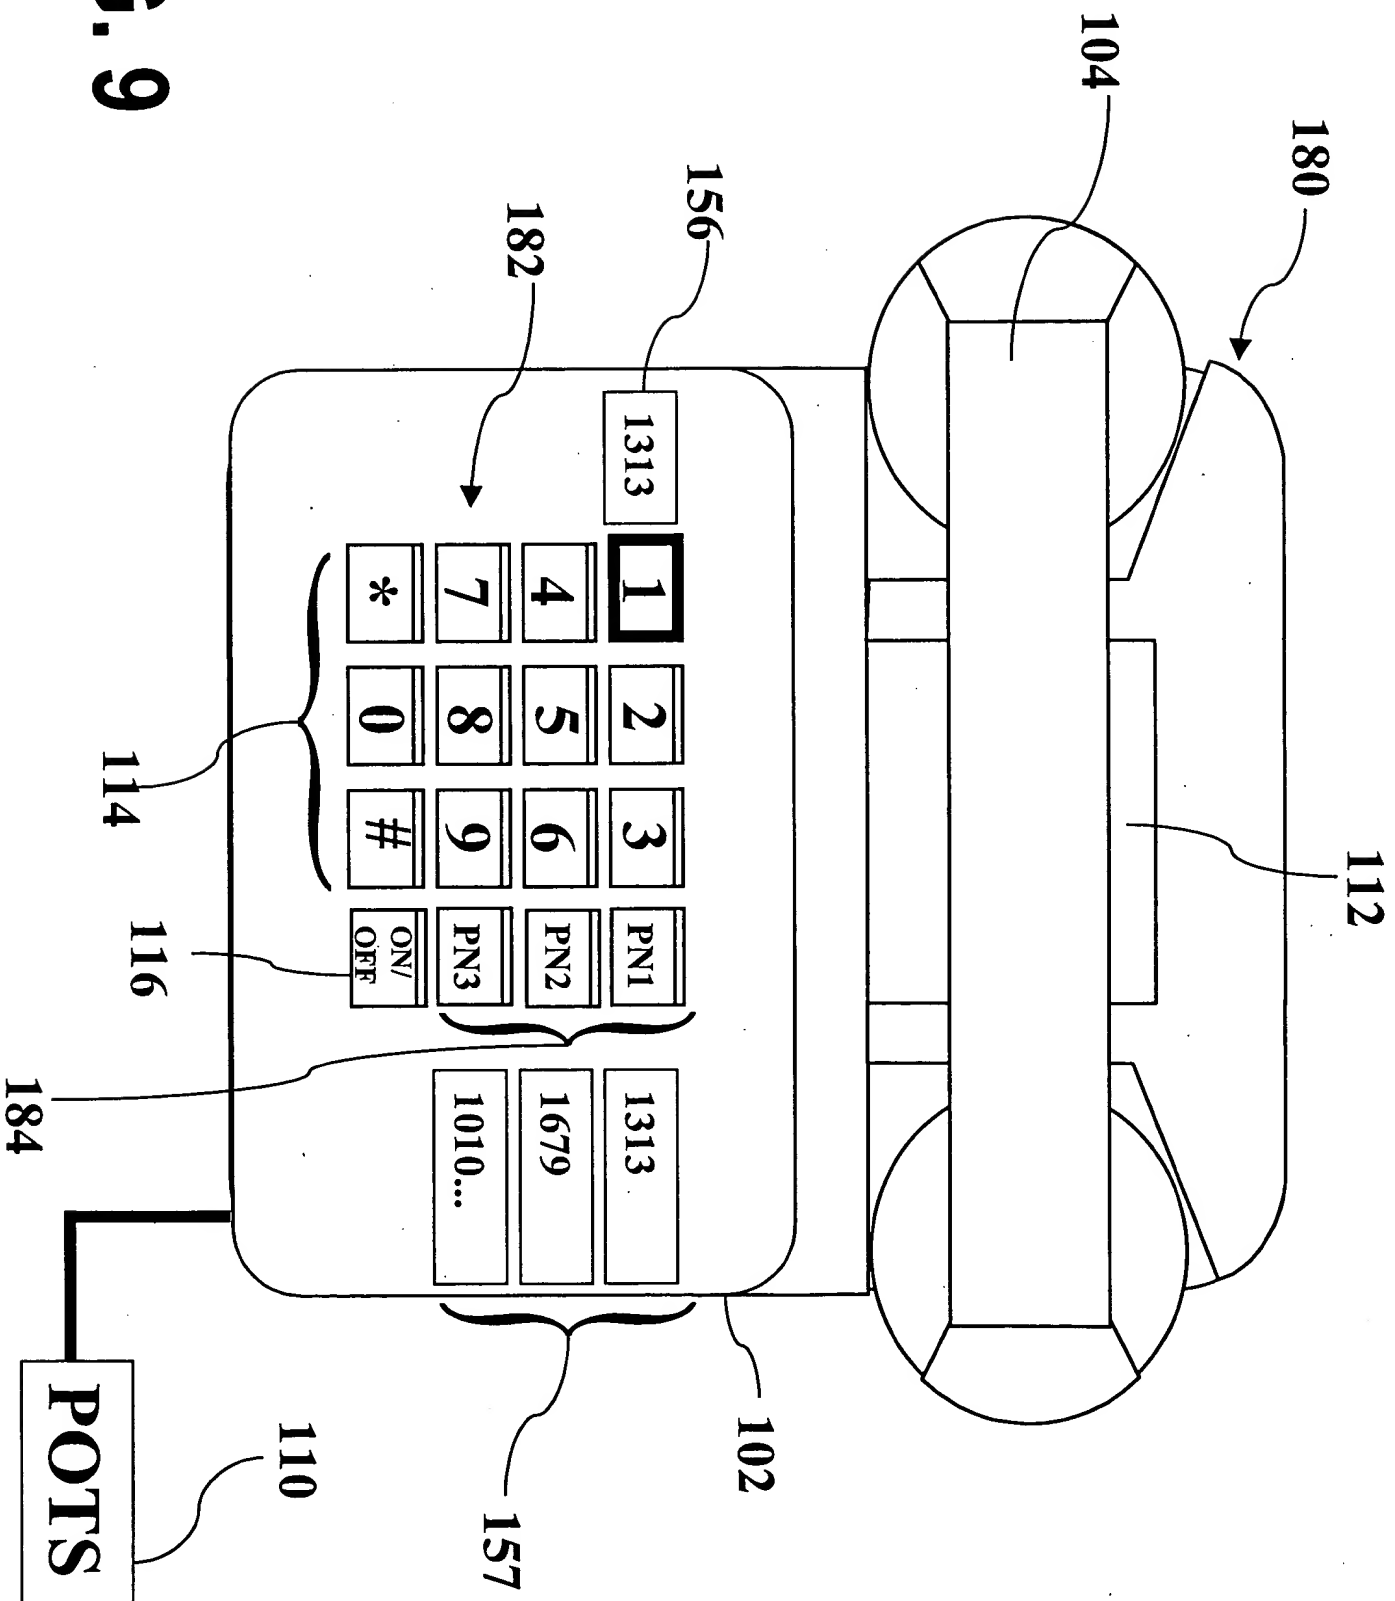


FIG. 9

FIG. 10

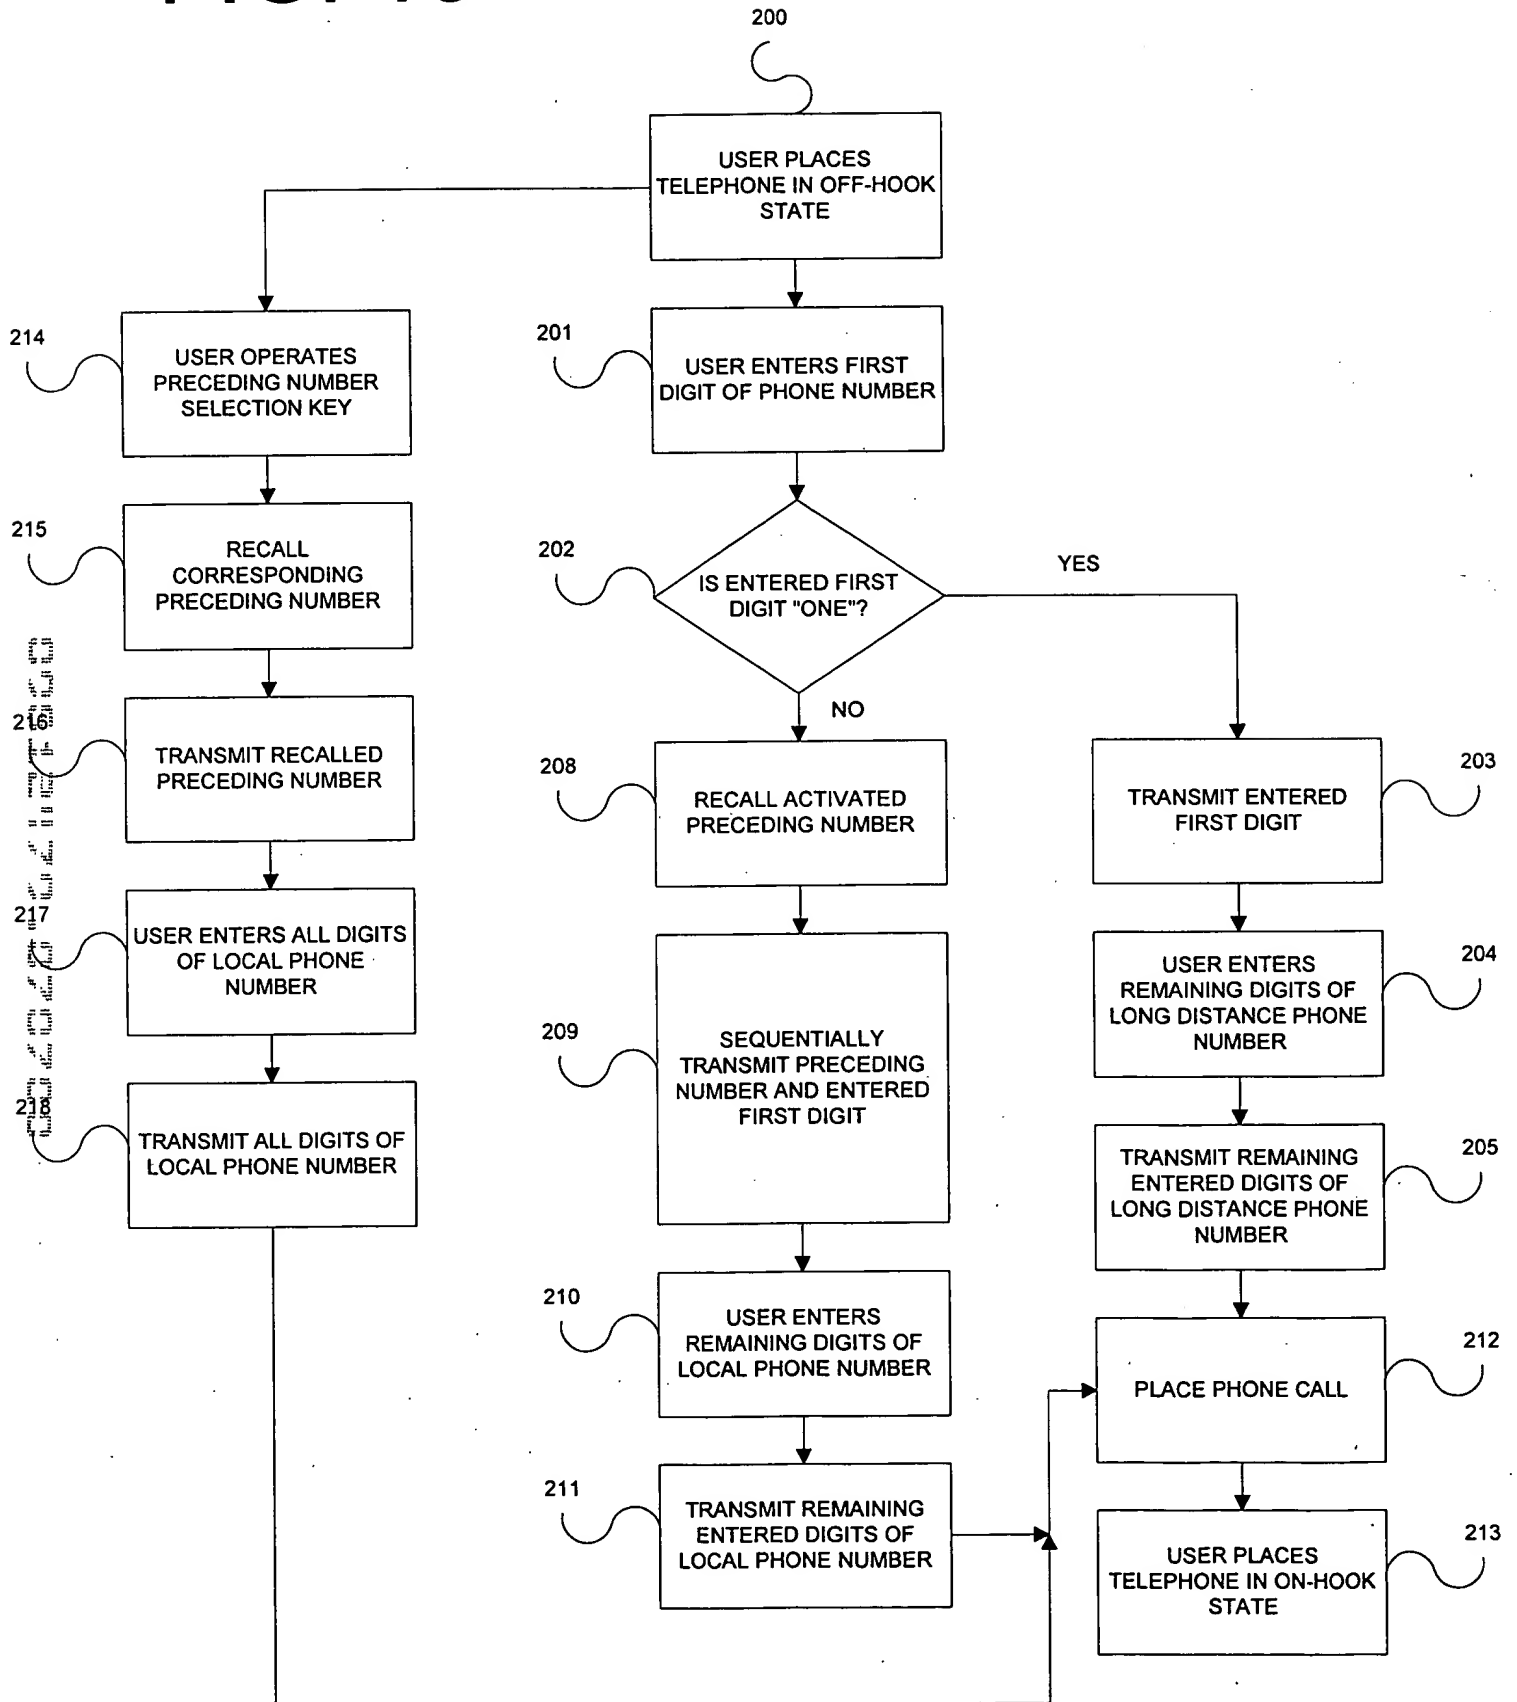


FIG. 11

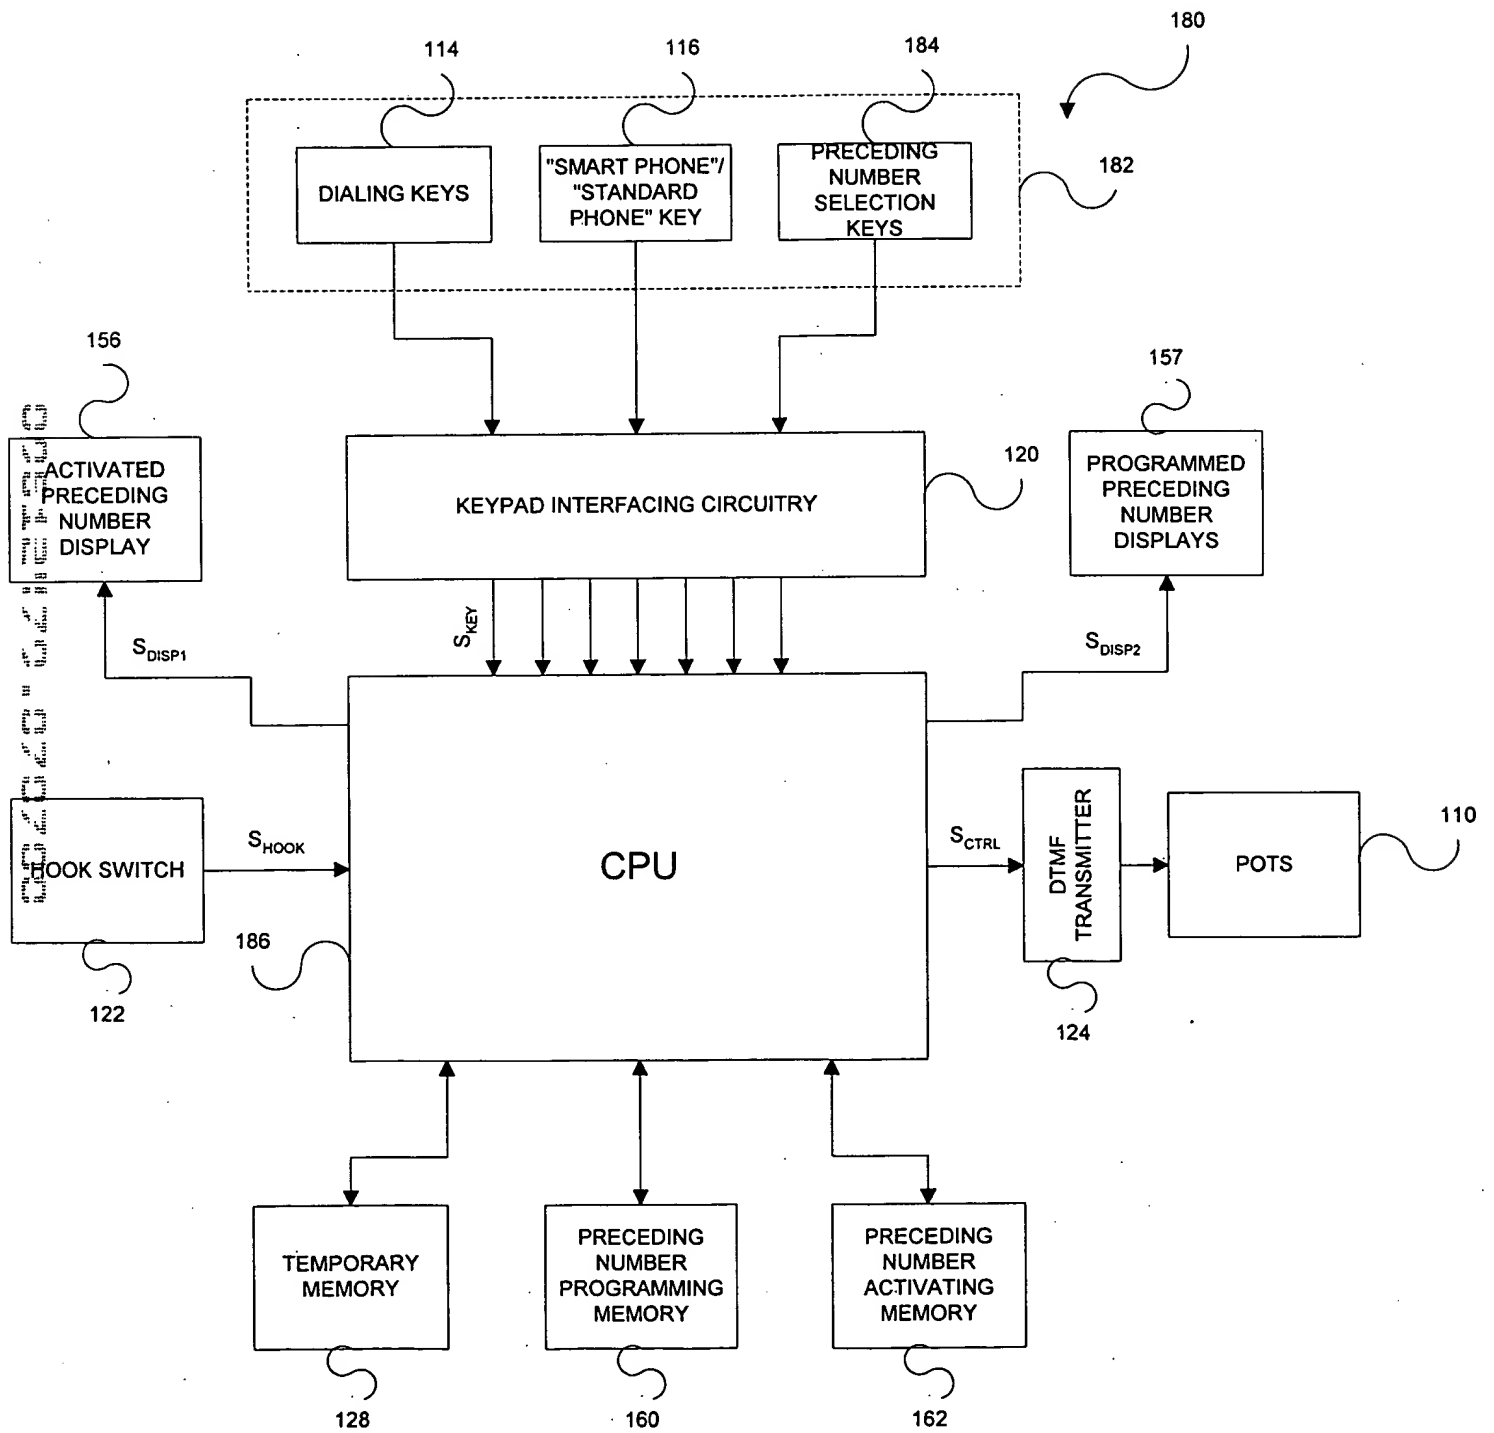


FIG. 12A

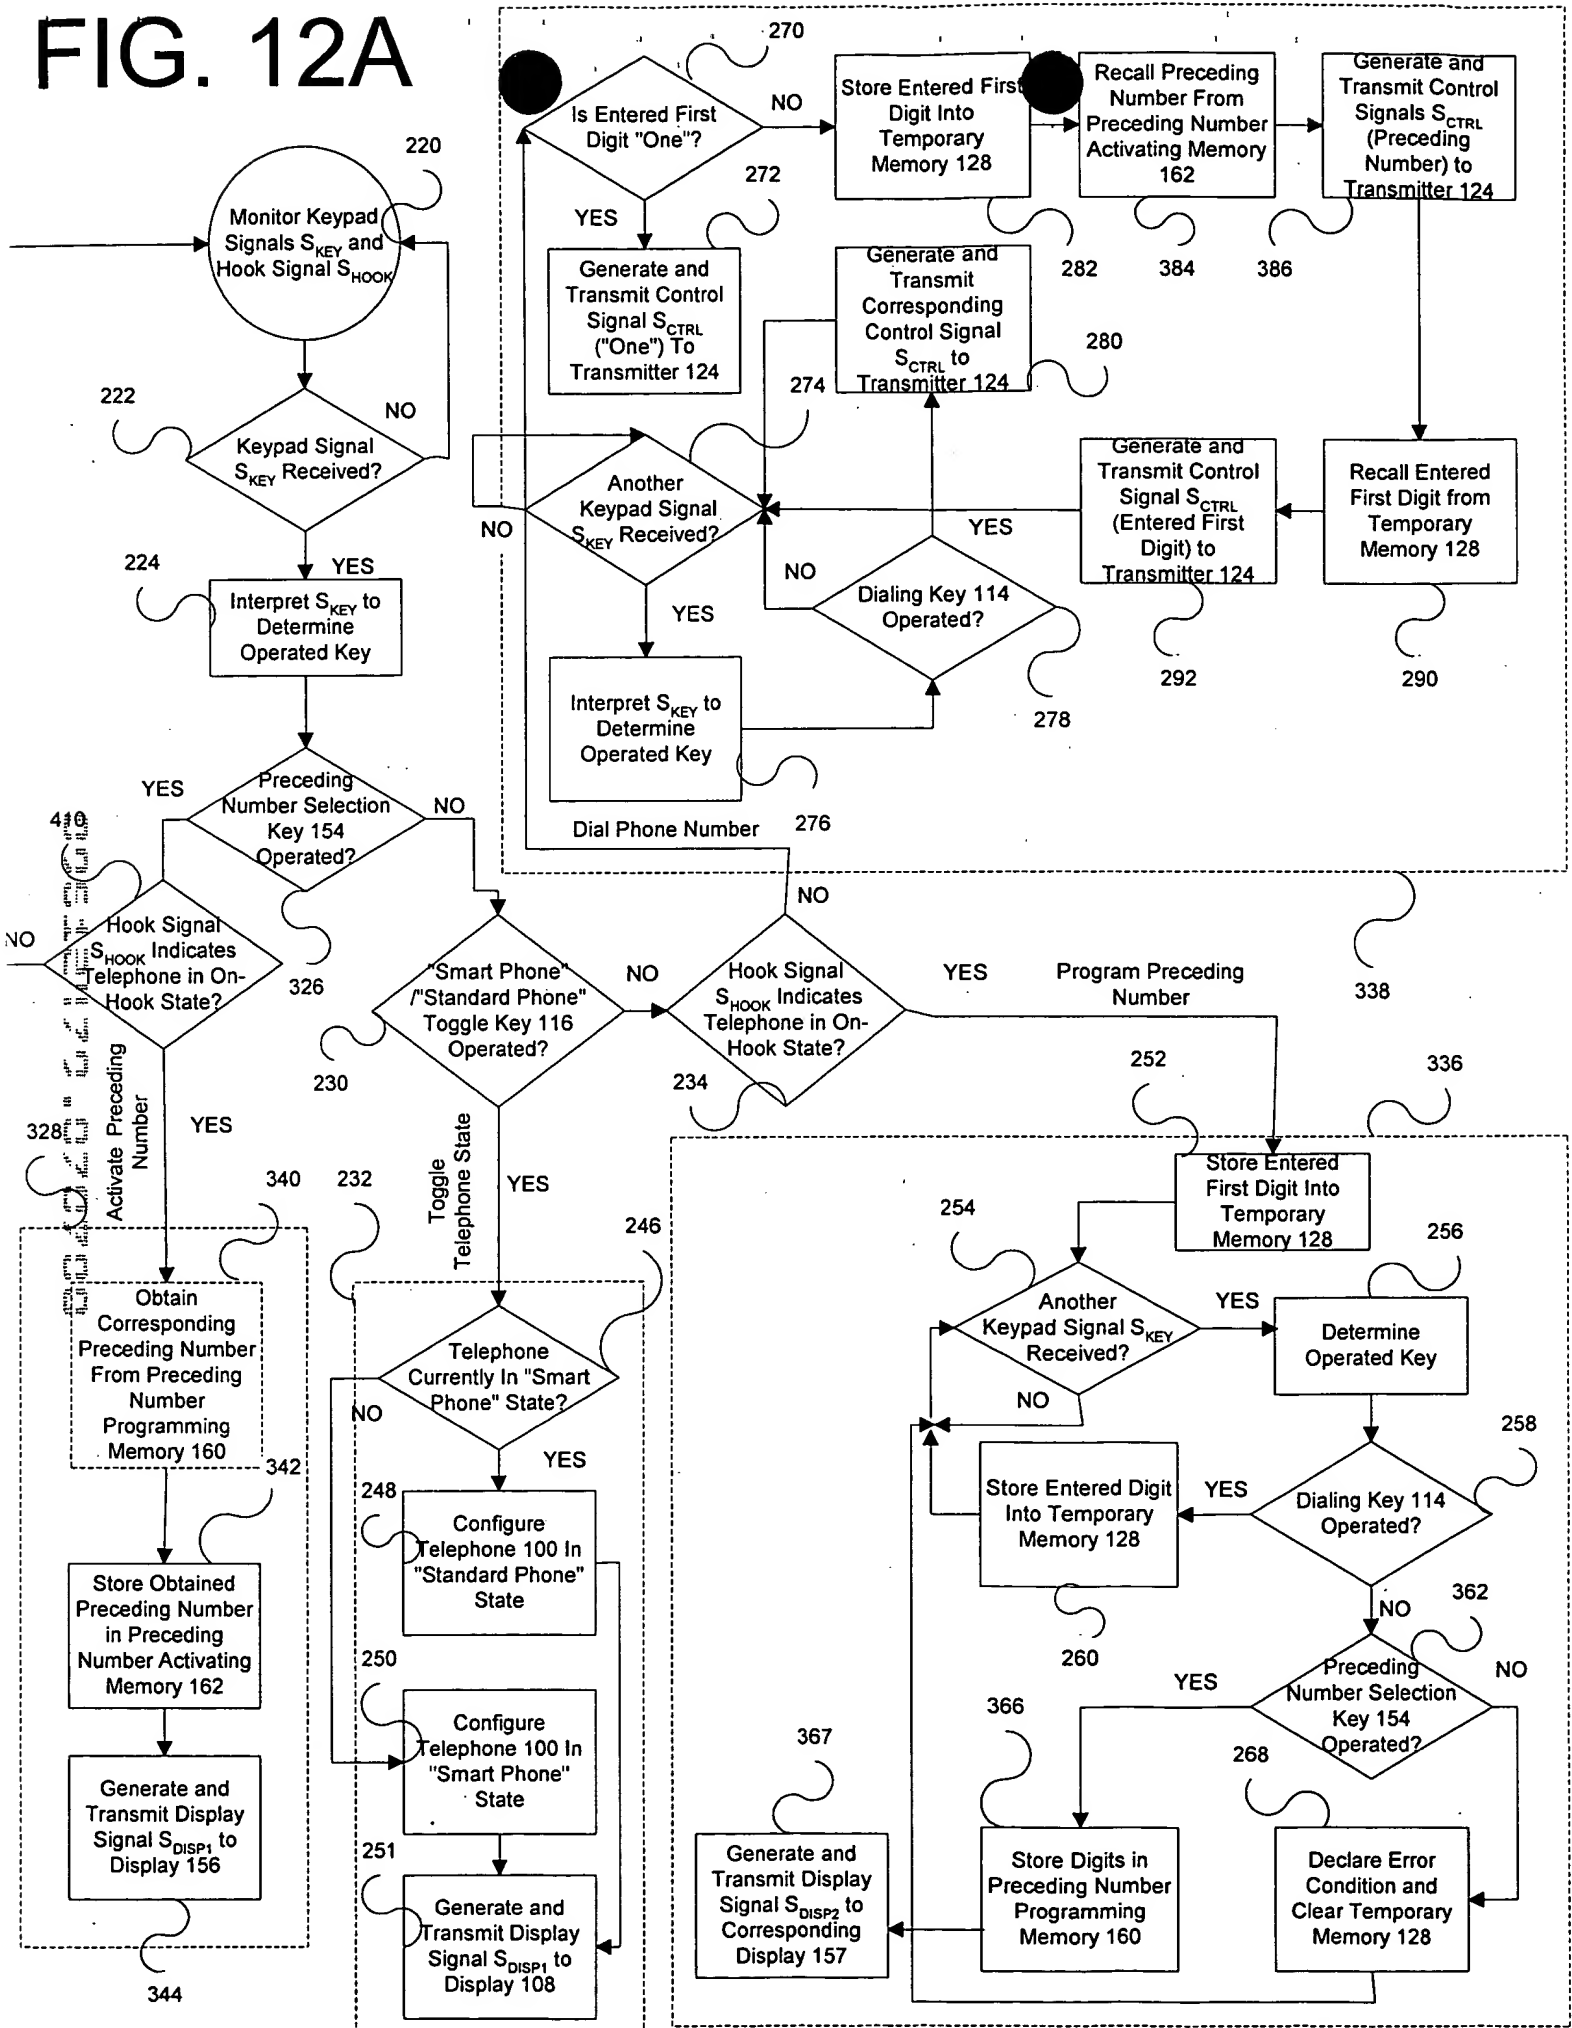


FIG. 12B

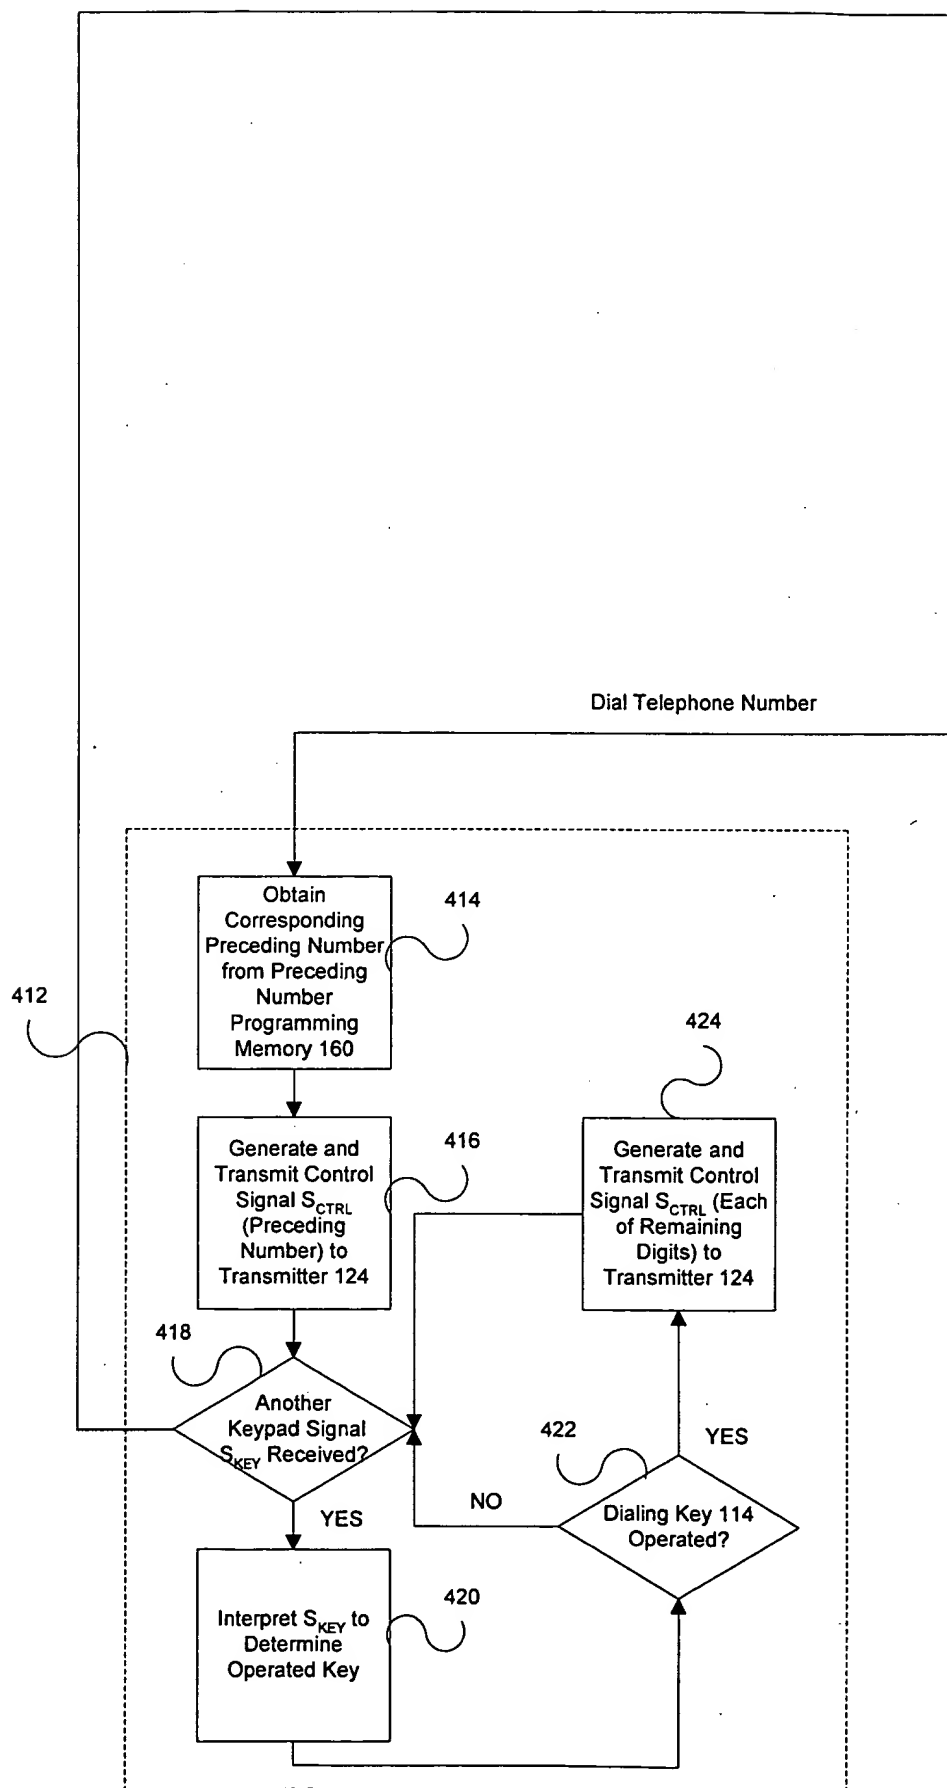
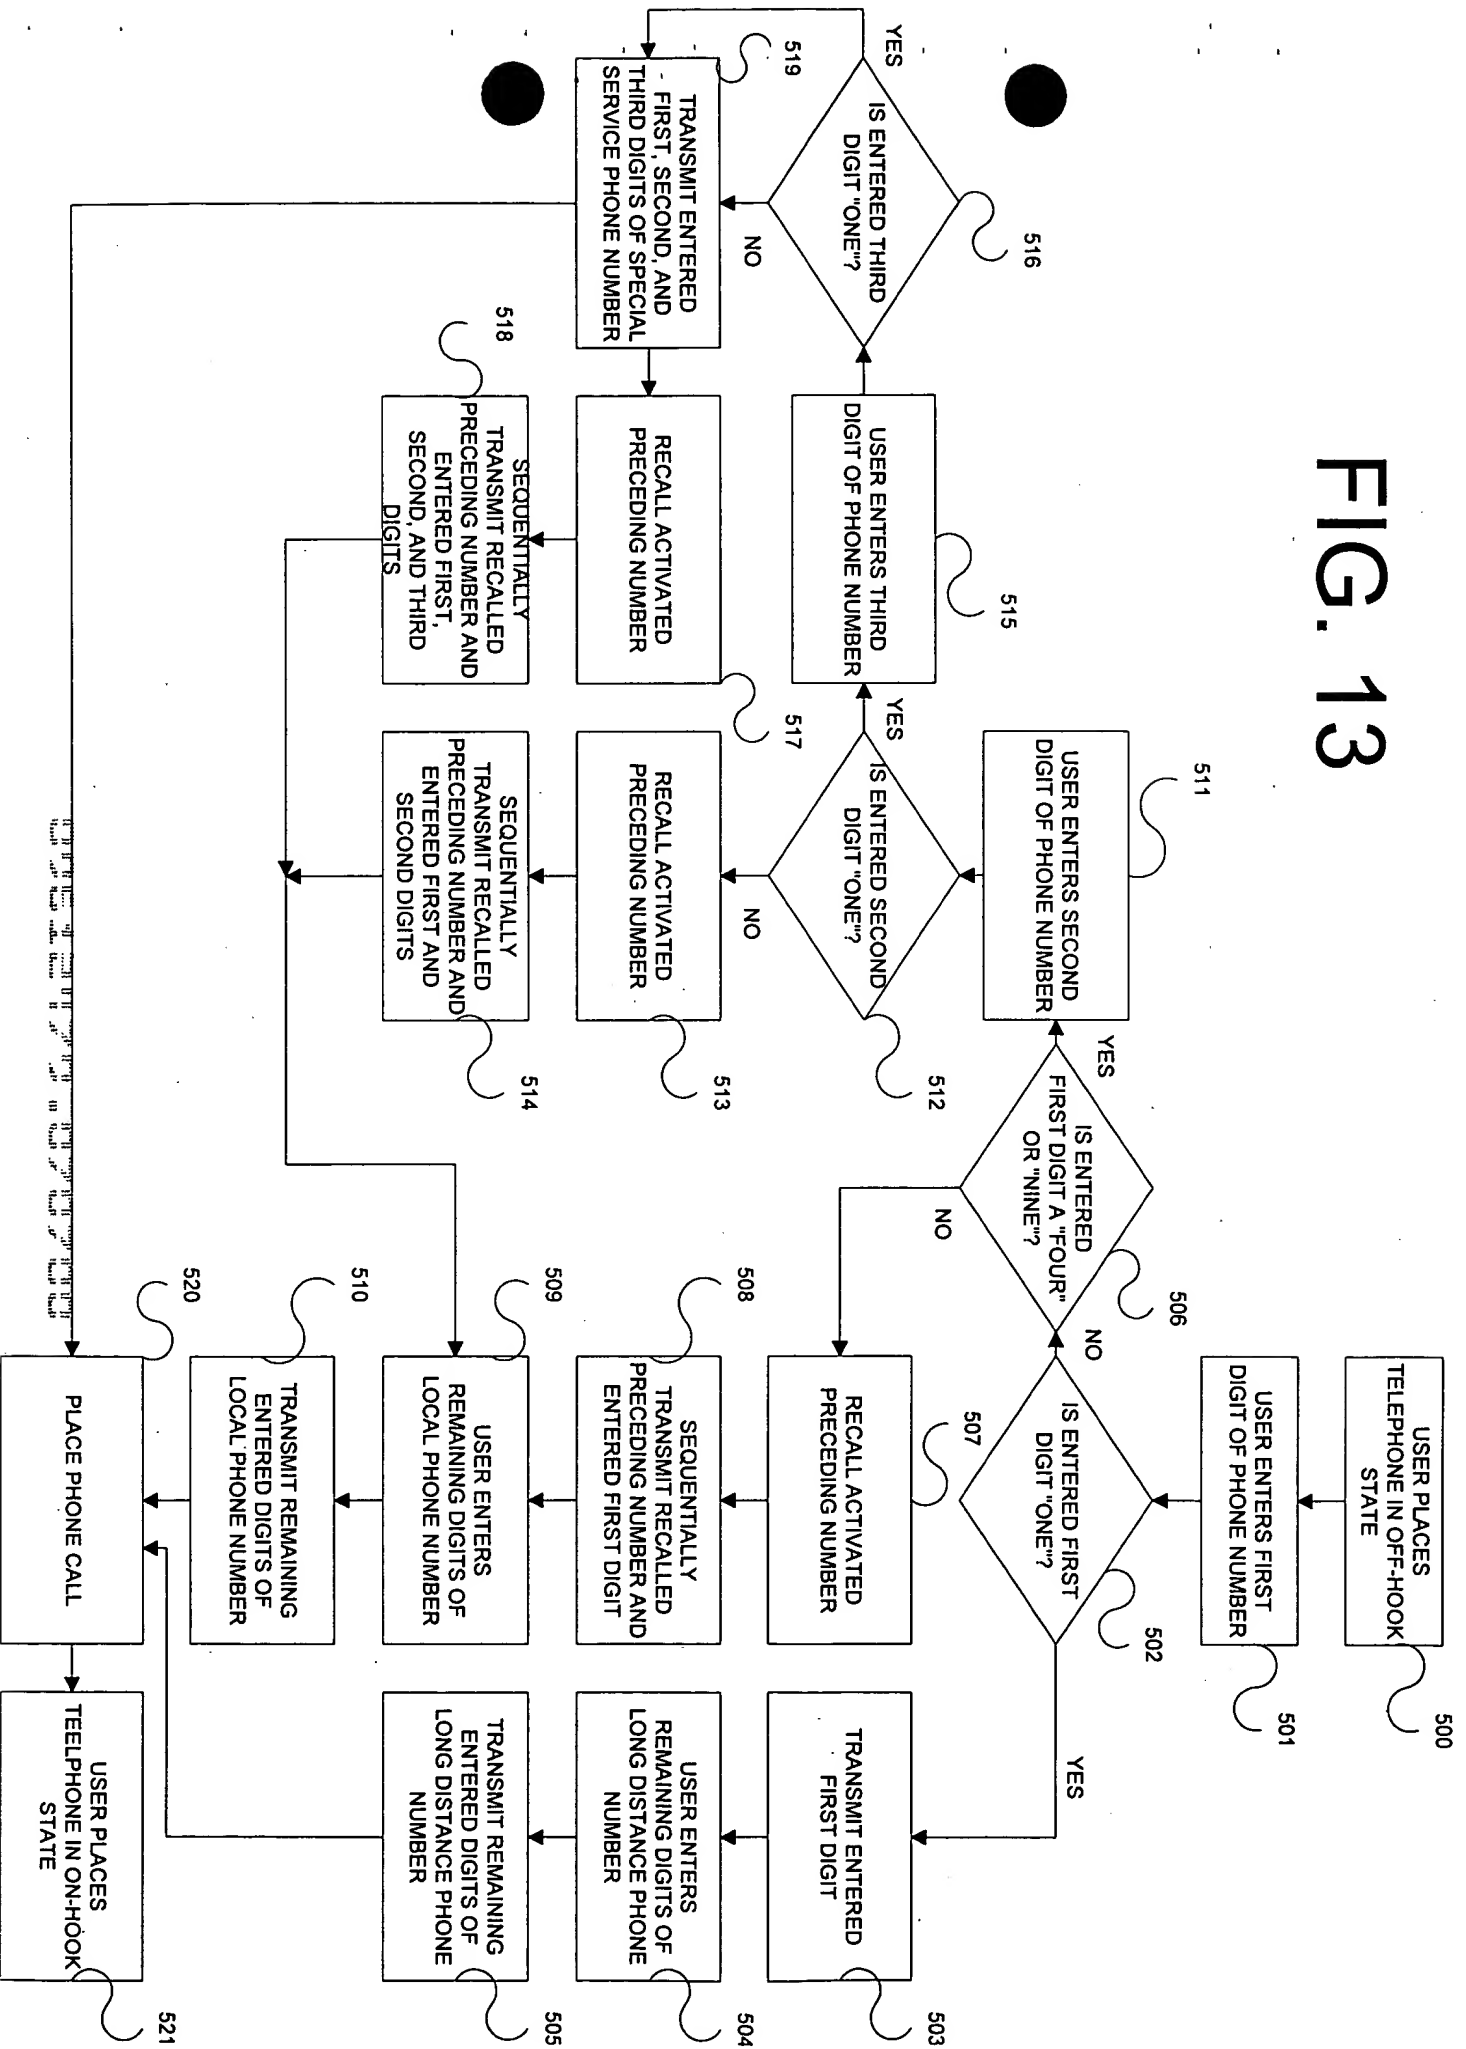


FIG. 13



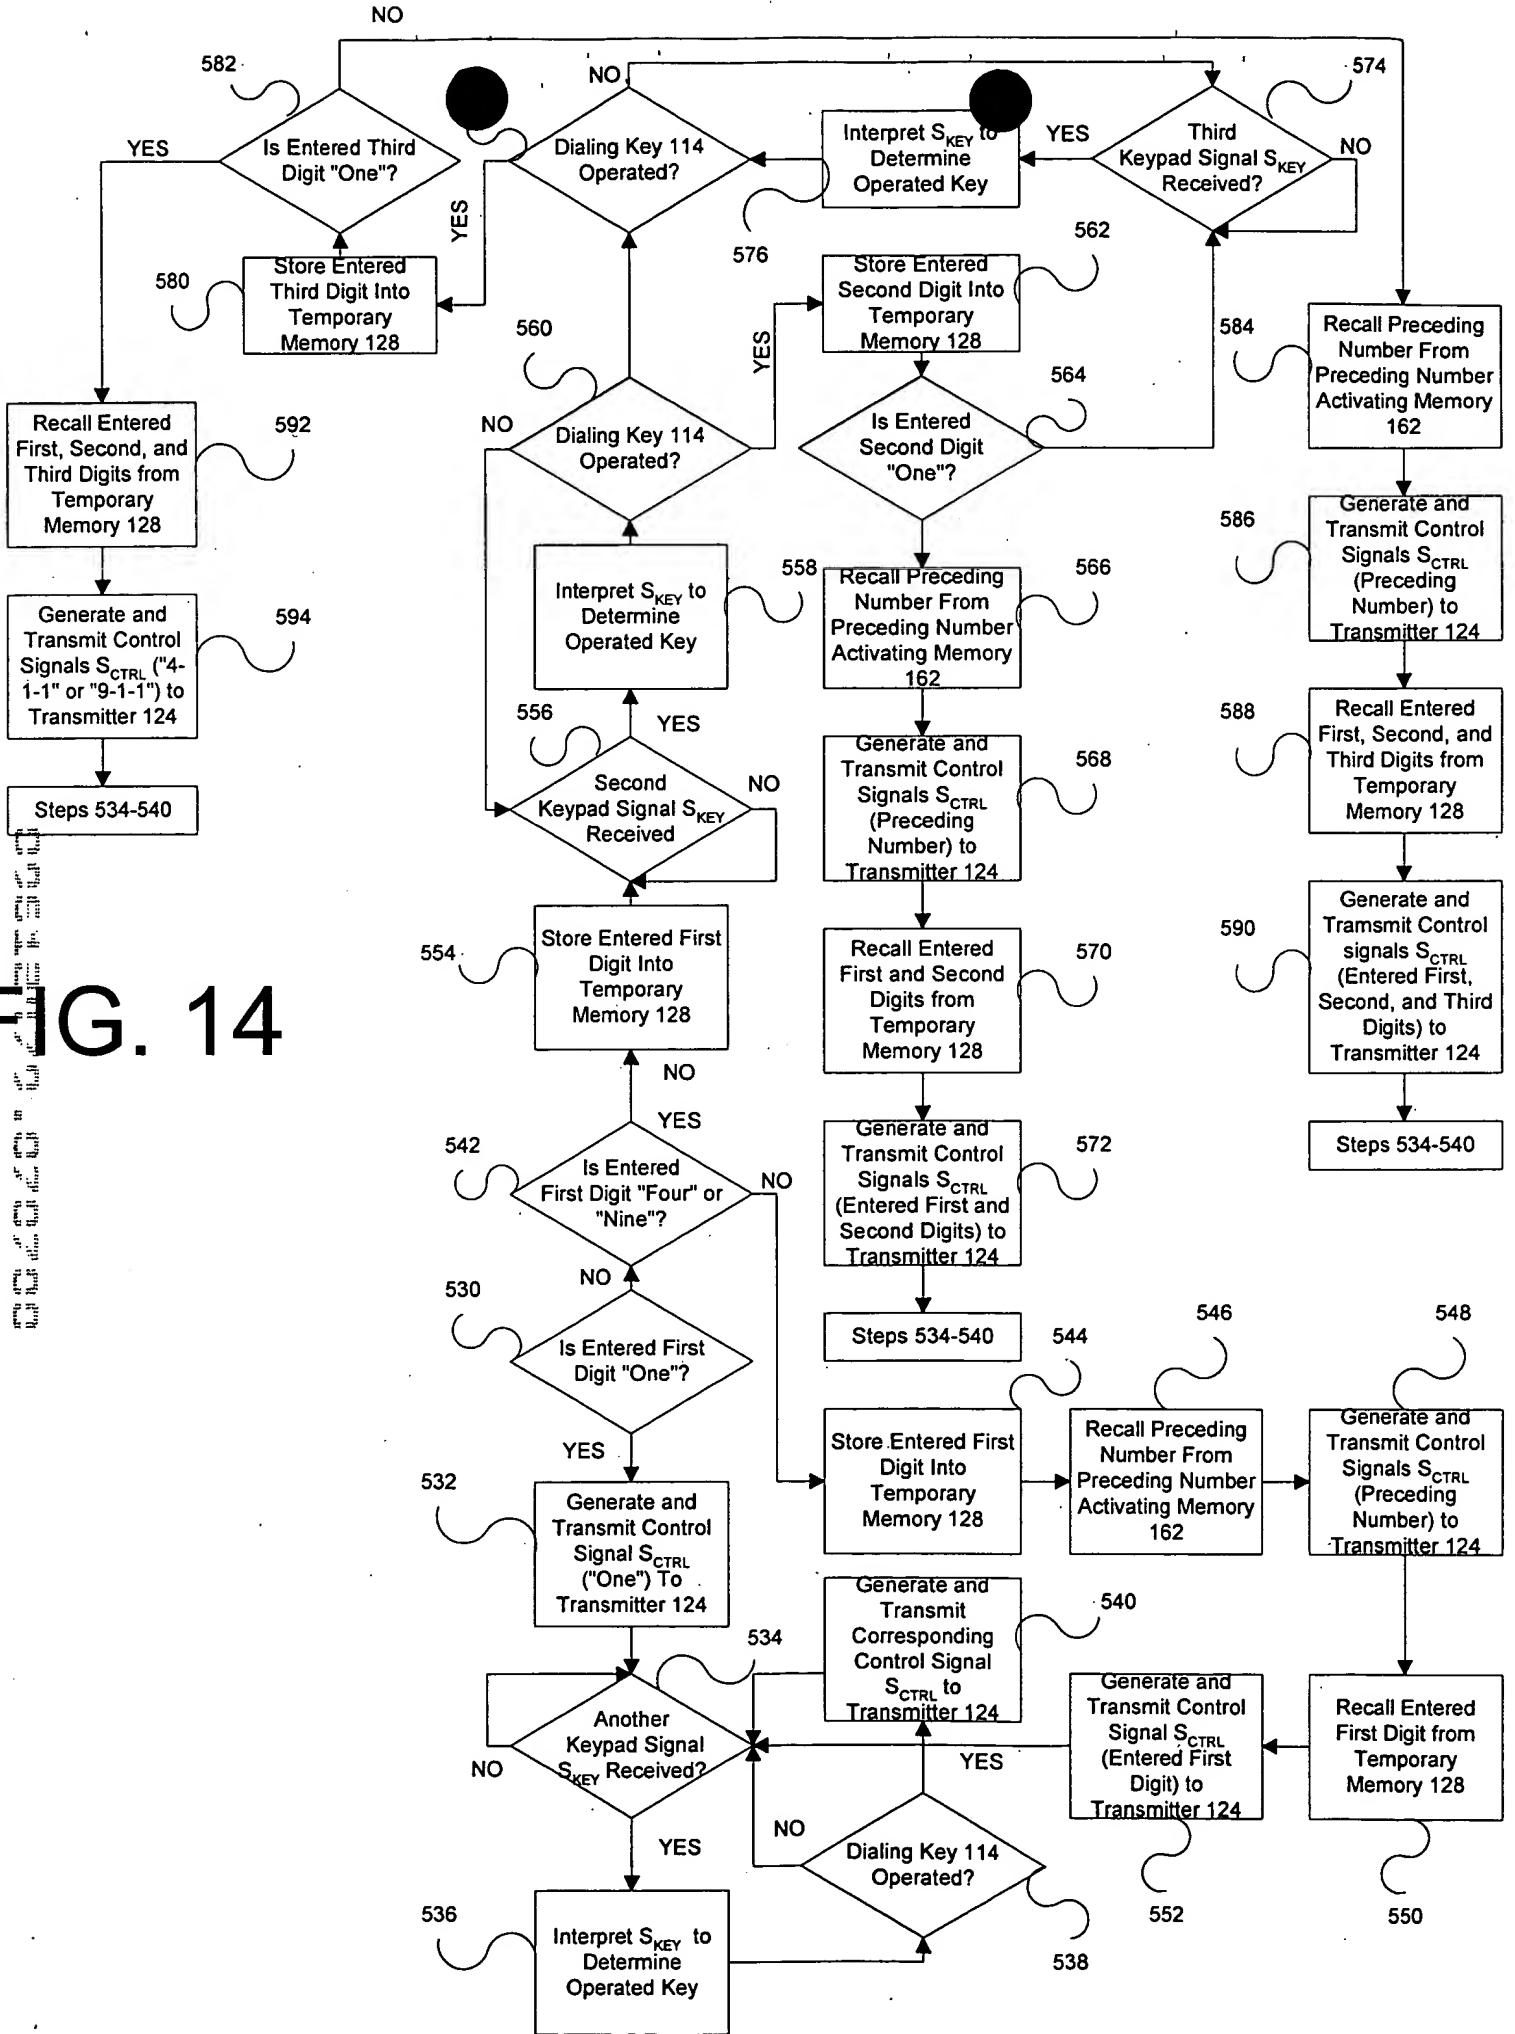


FIG. 15

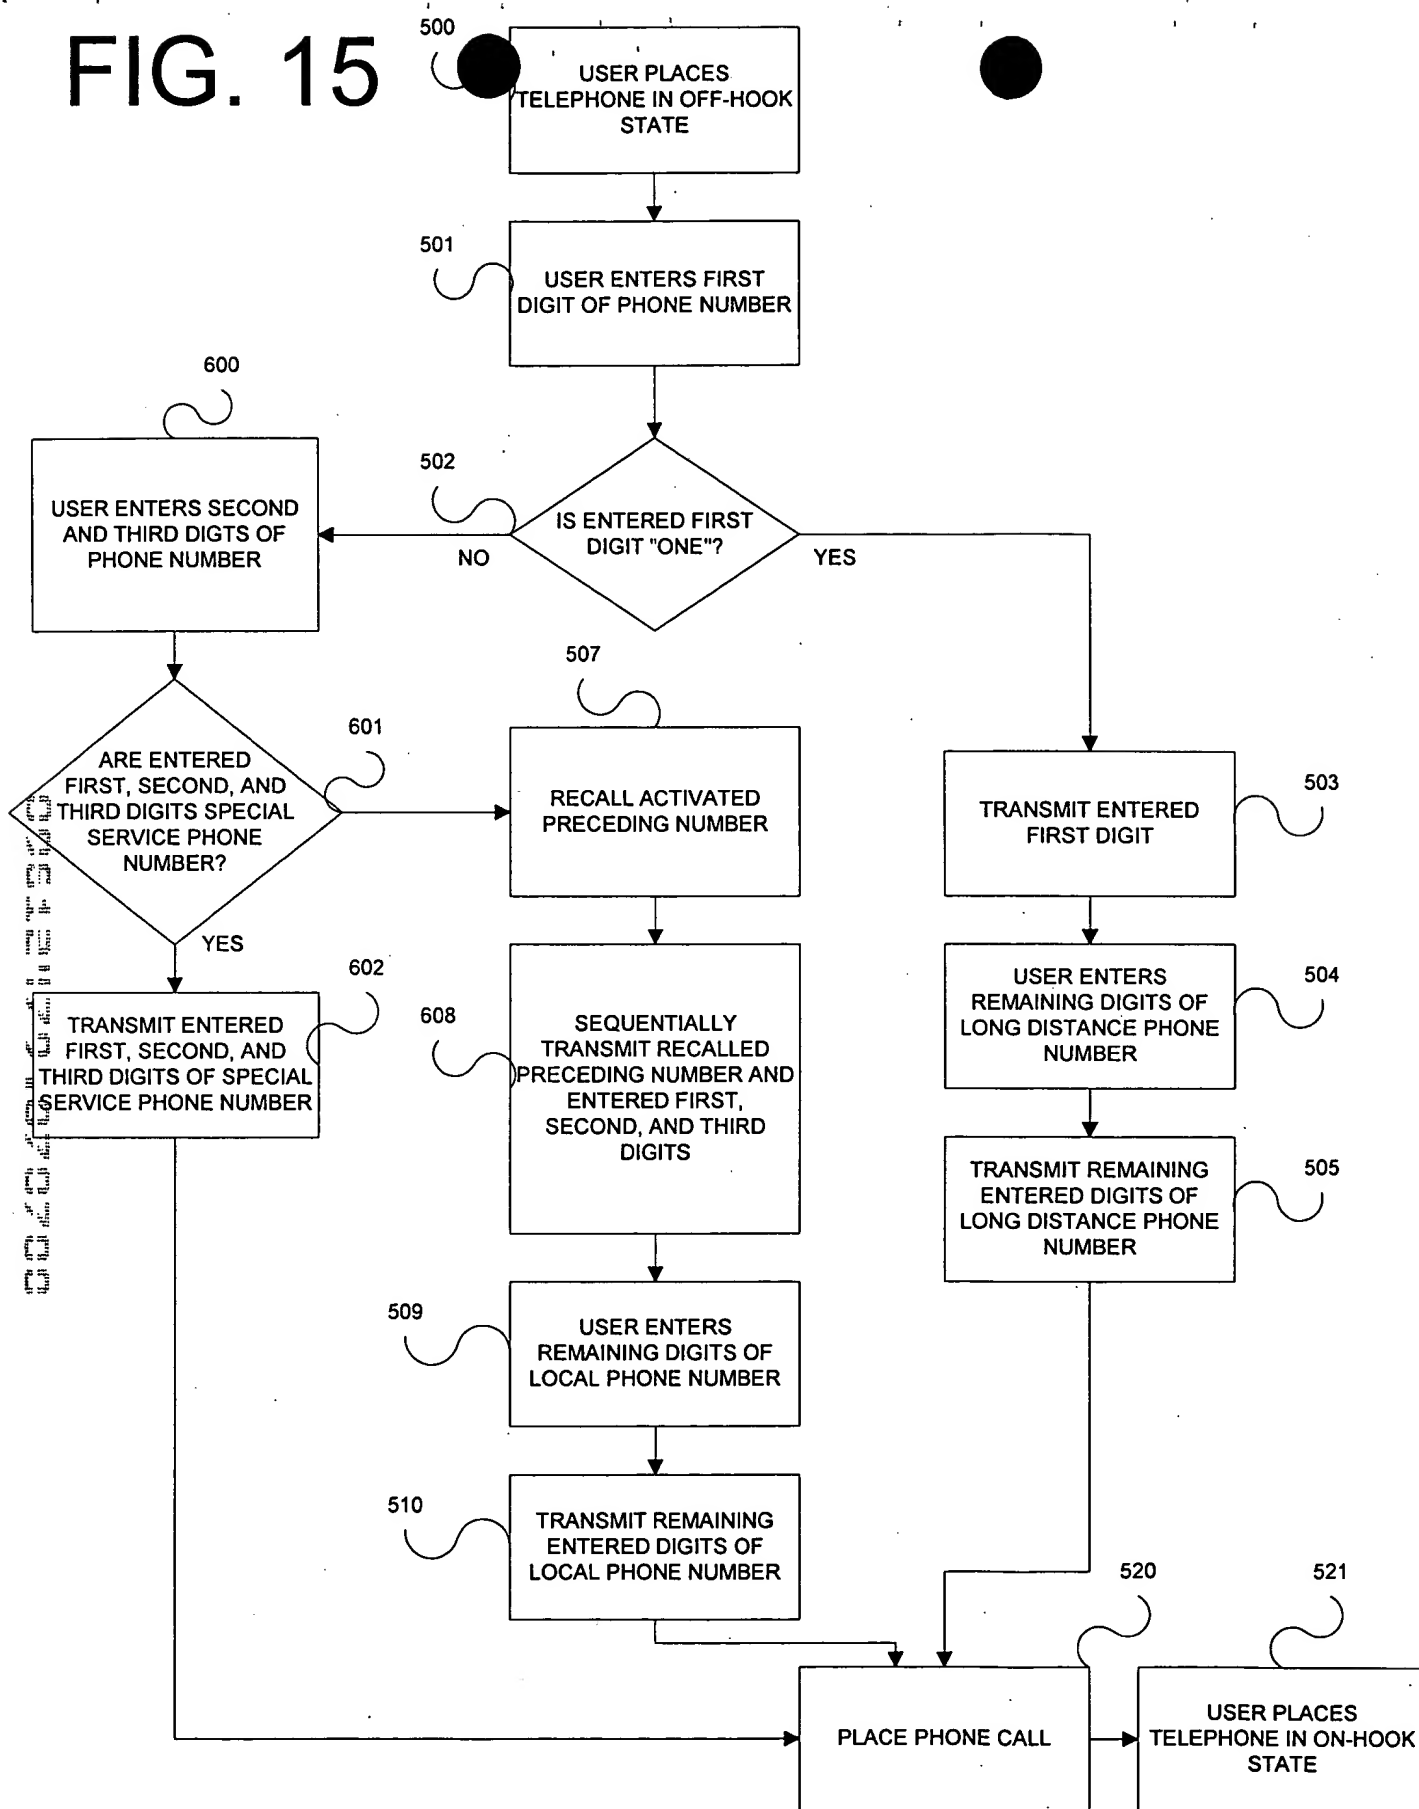
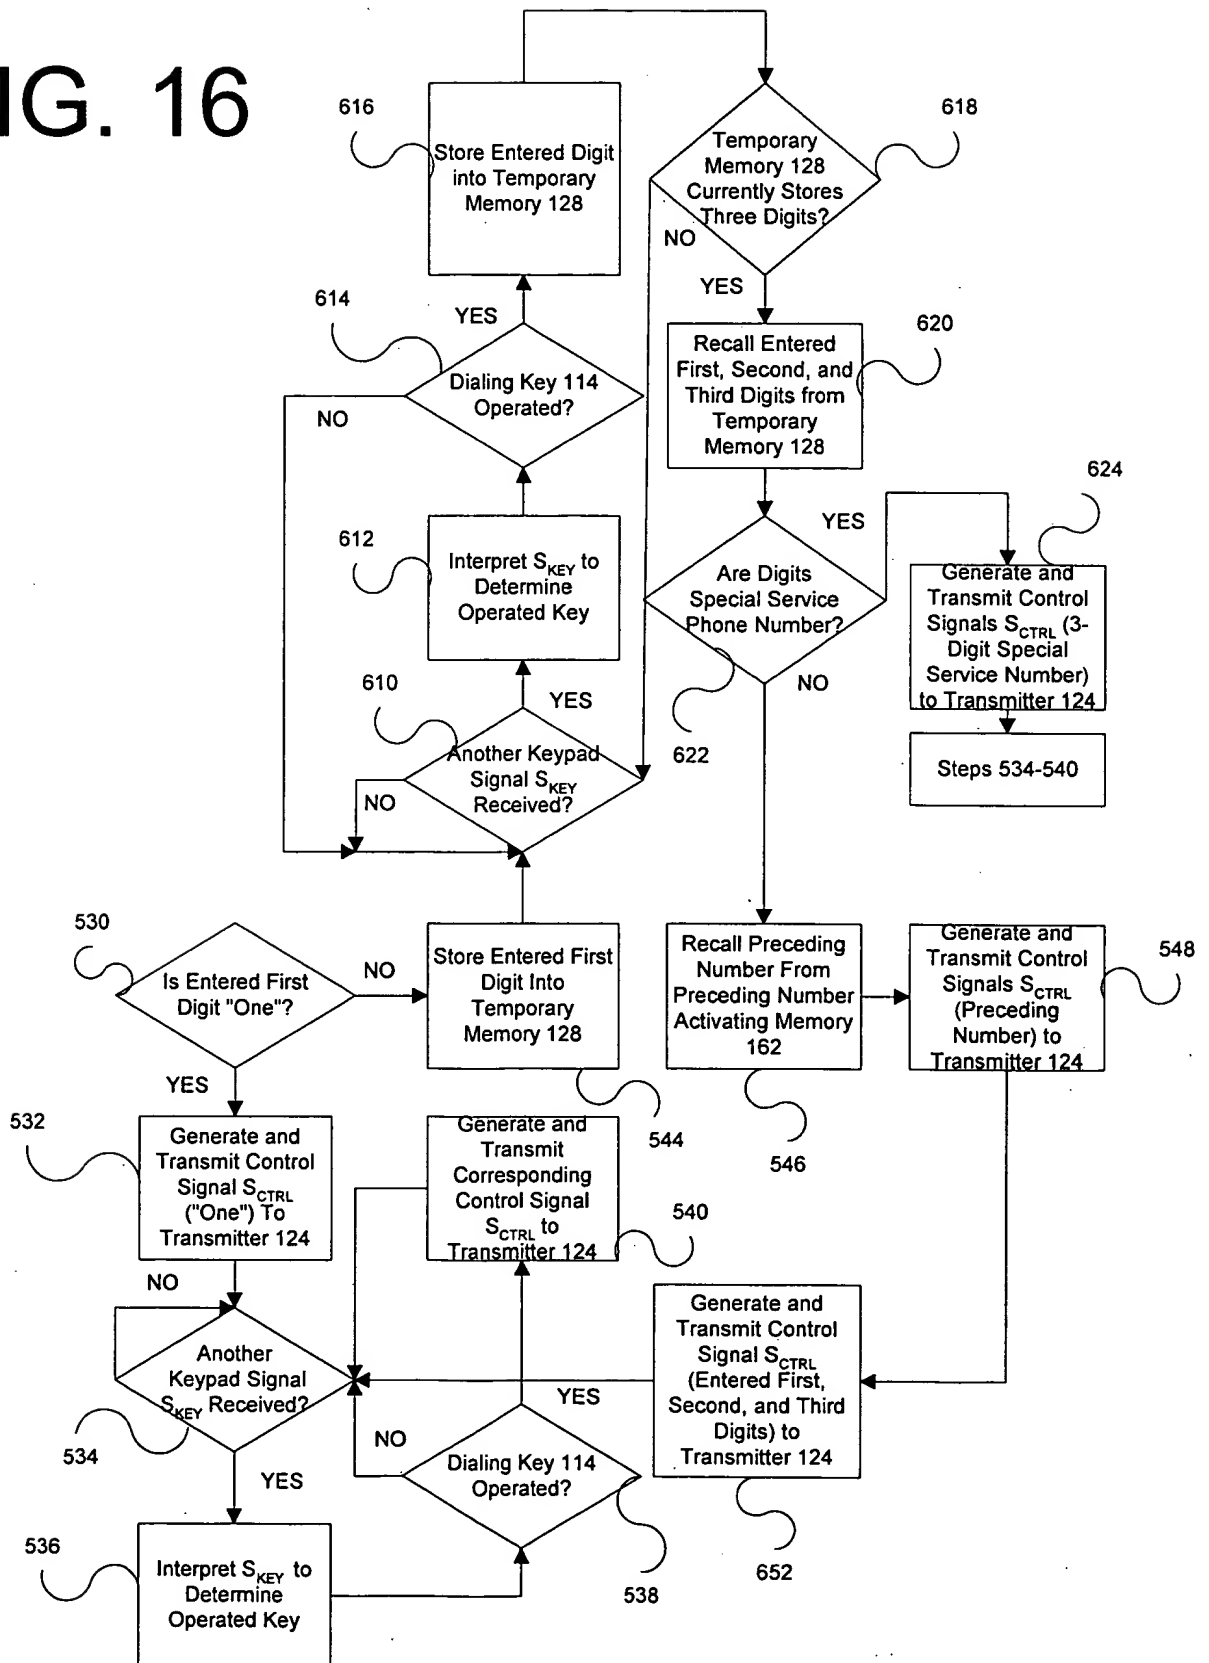


FIG. 16



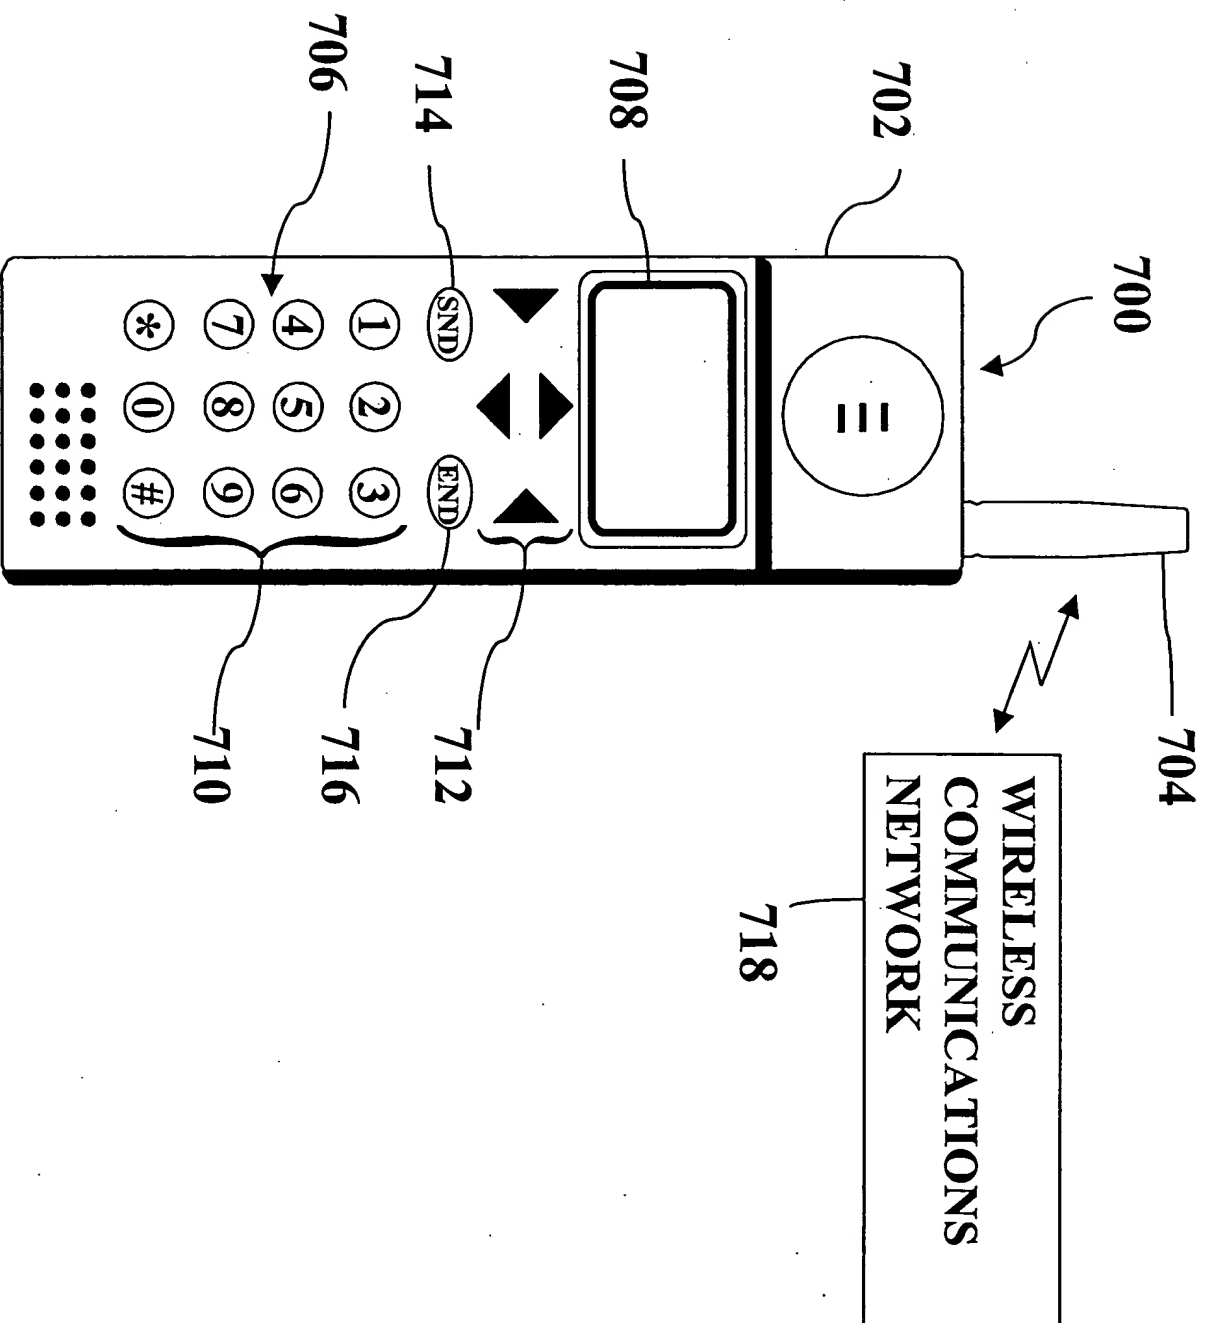


FIG. 17

FIG. 18

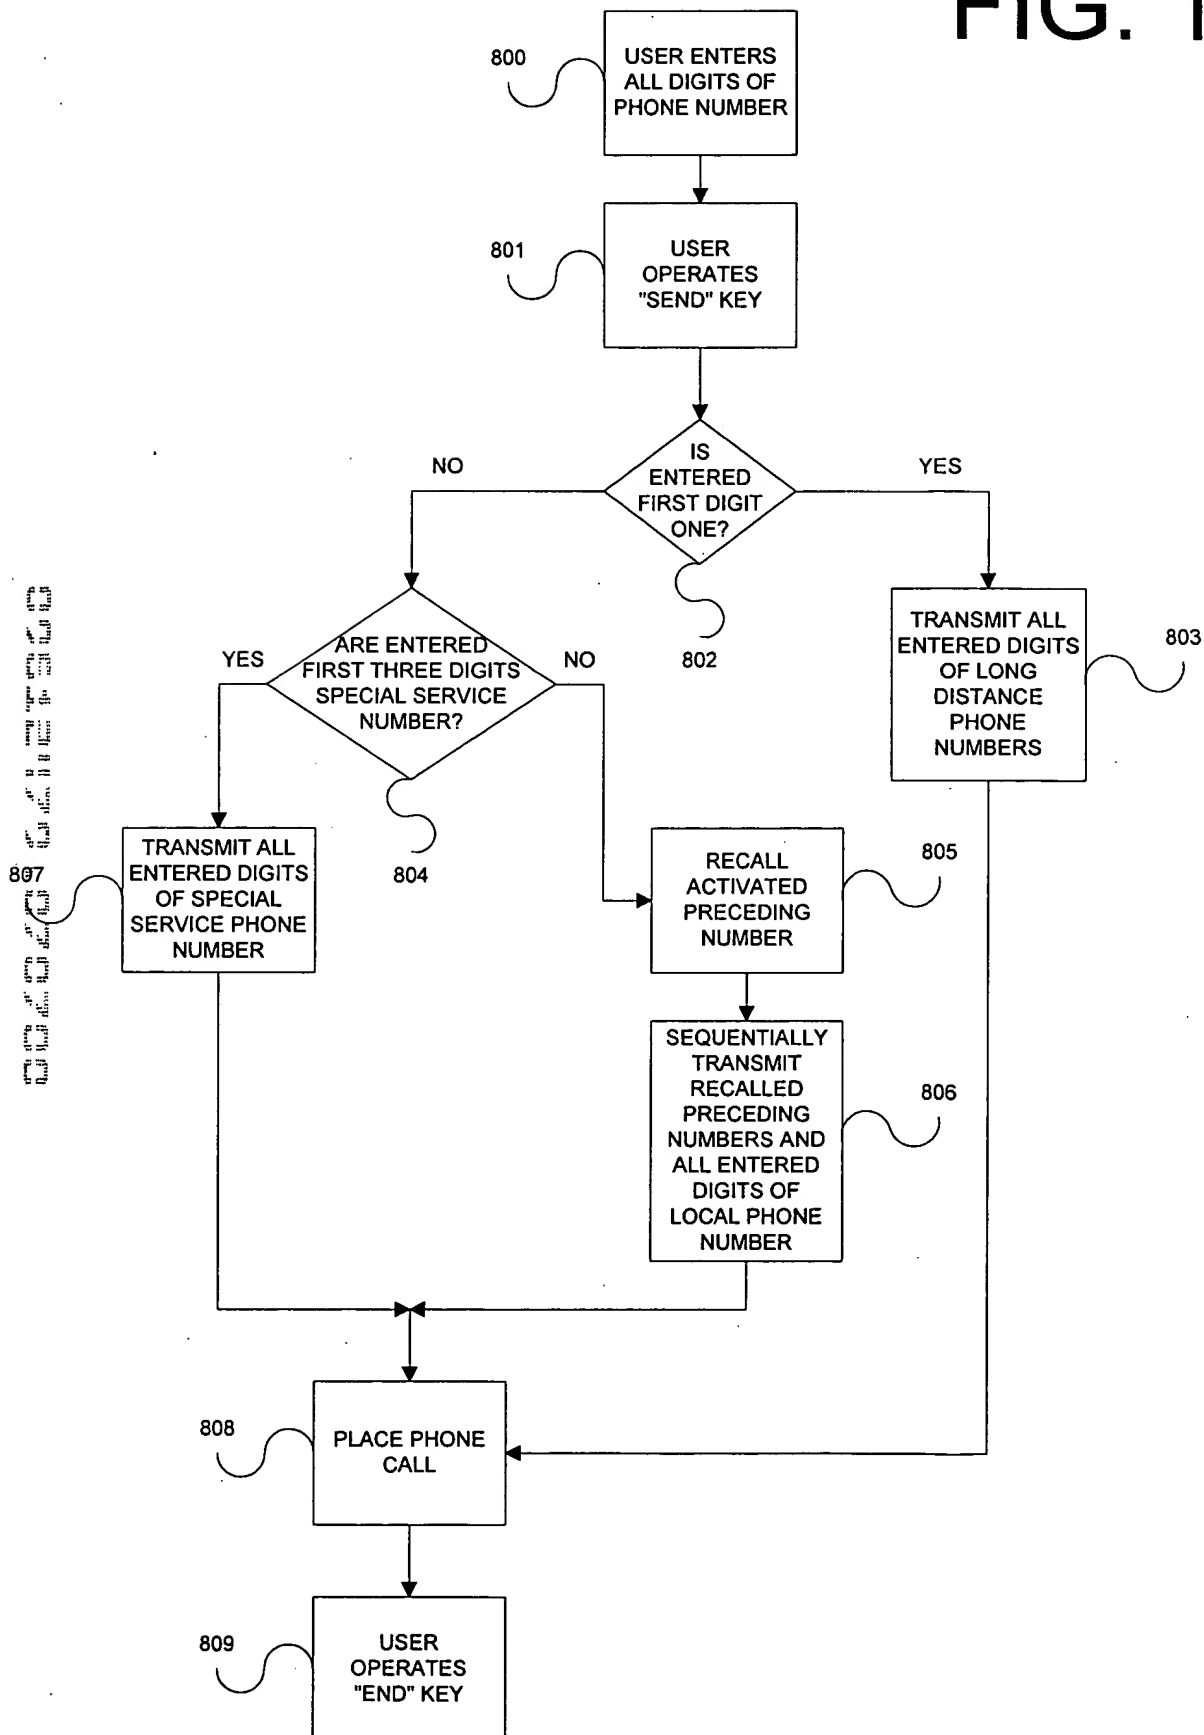


FIG. 19

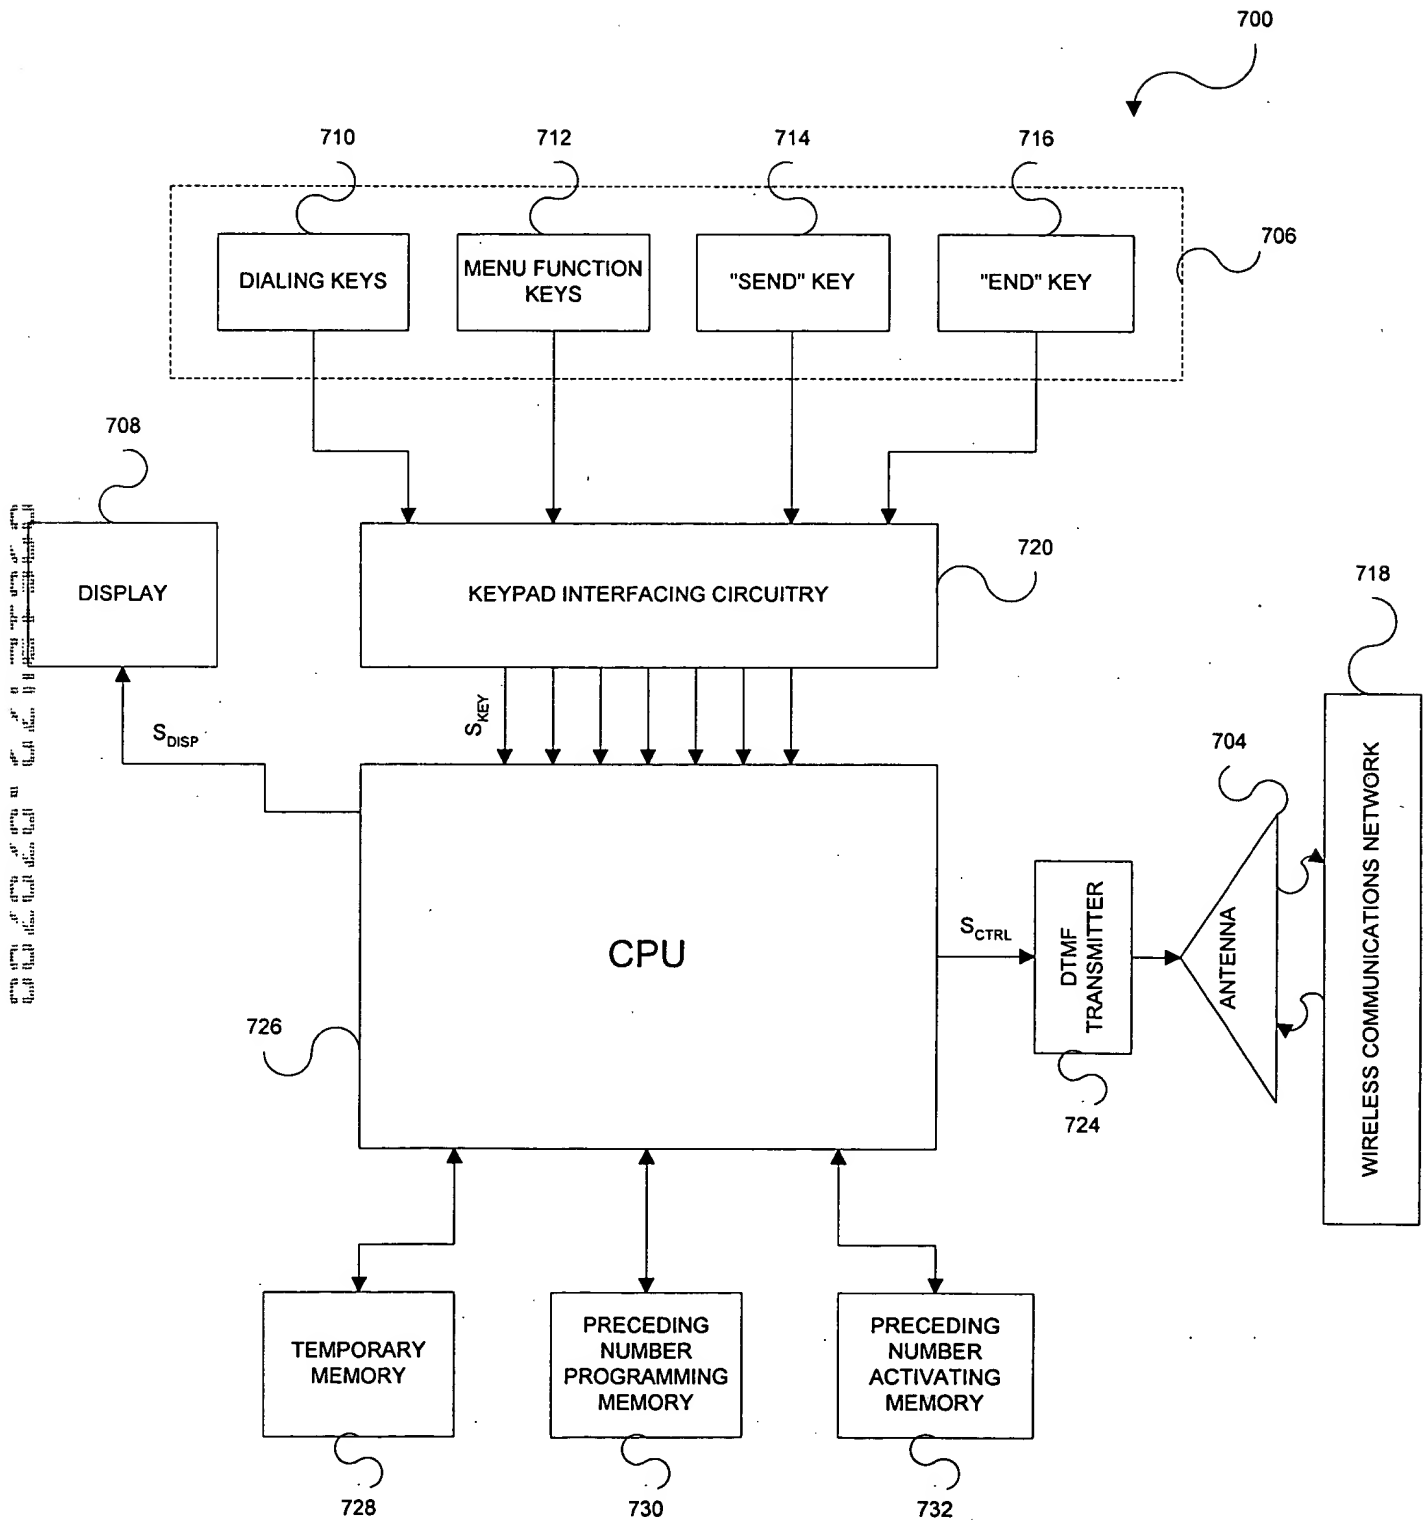


FIG. 20

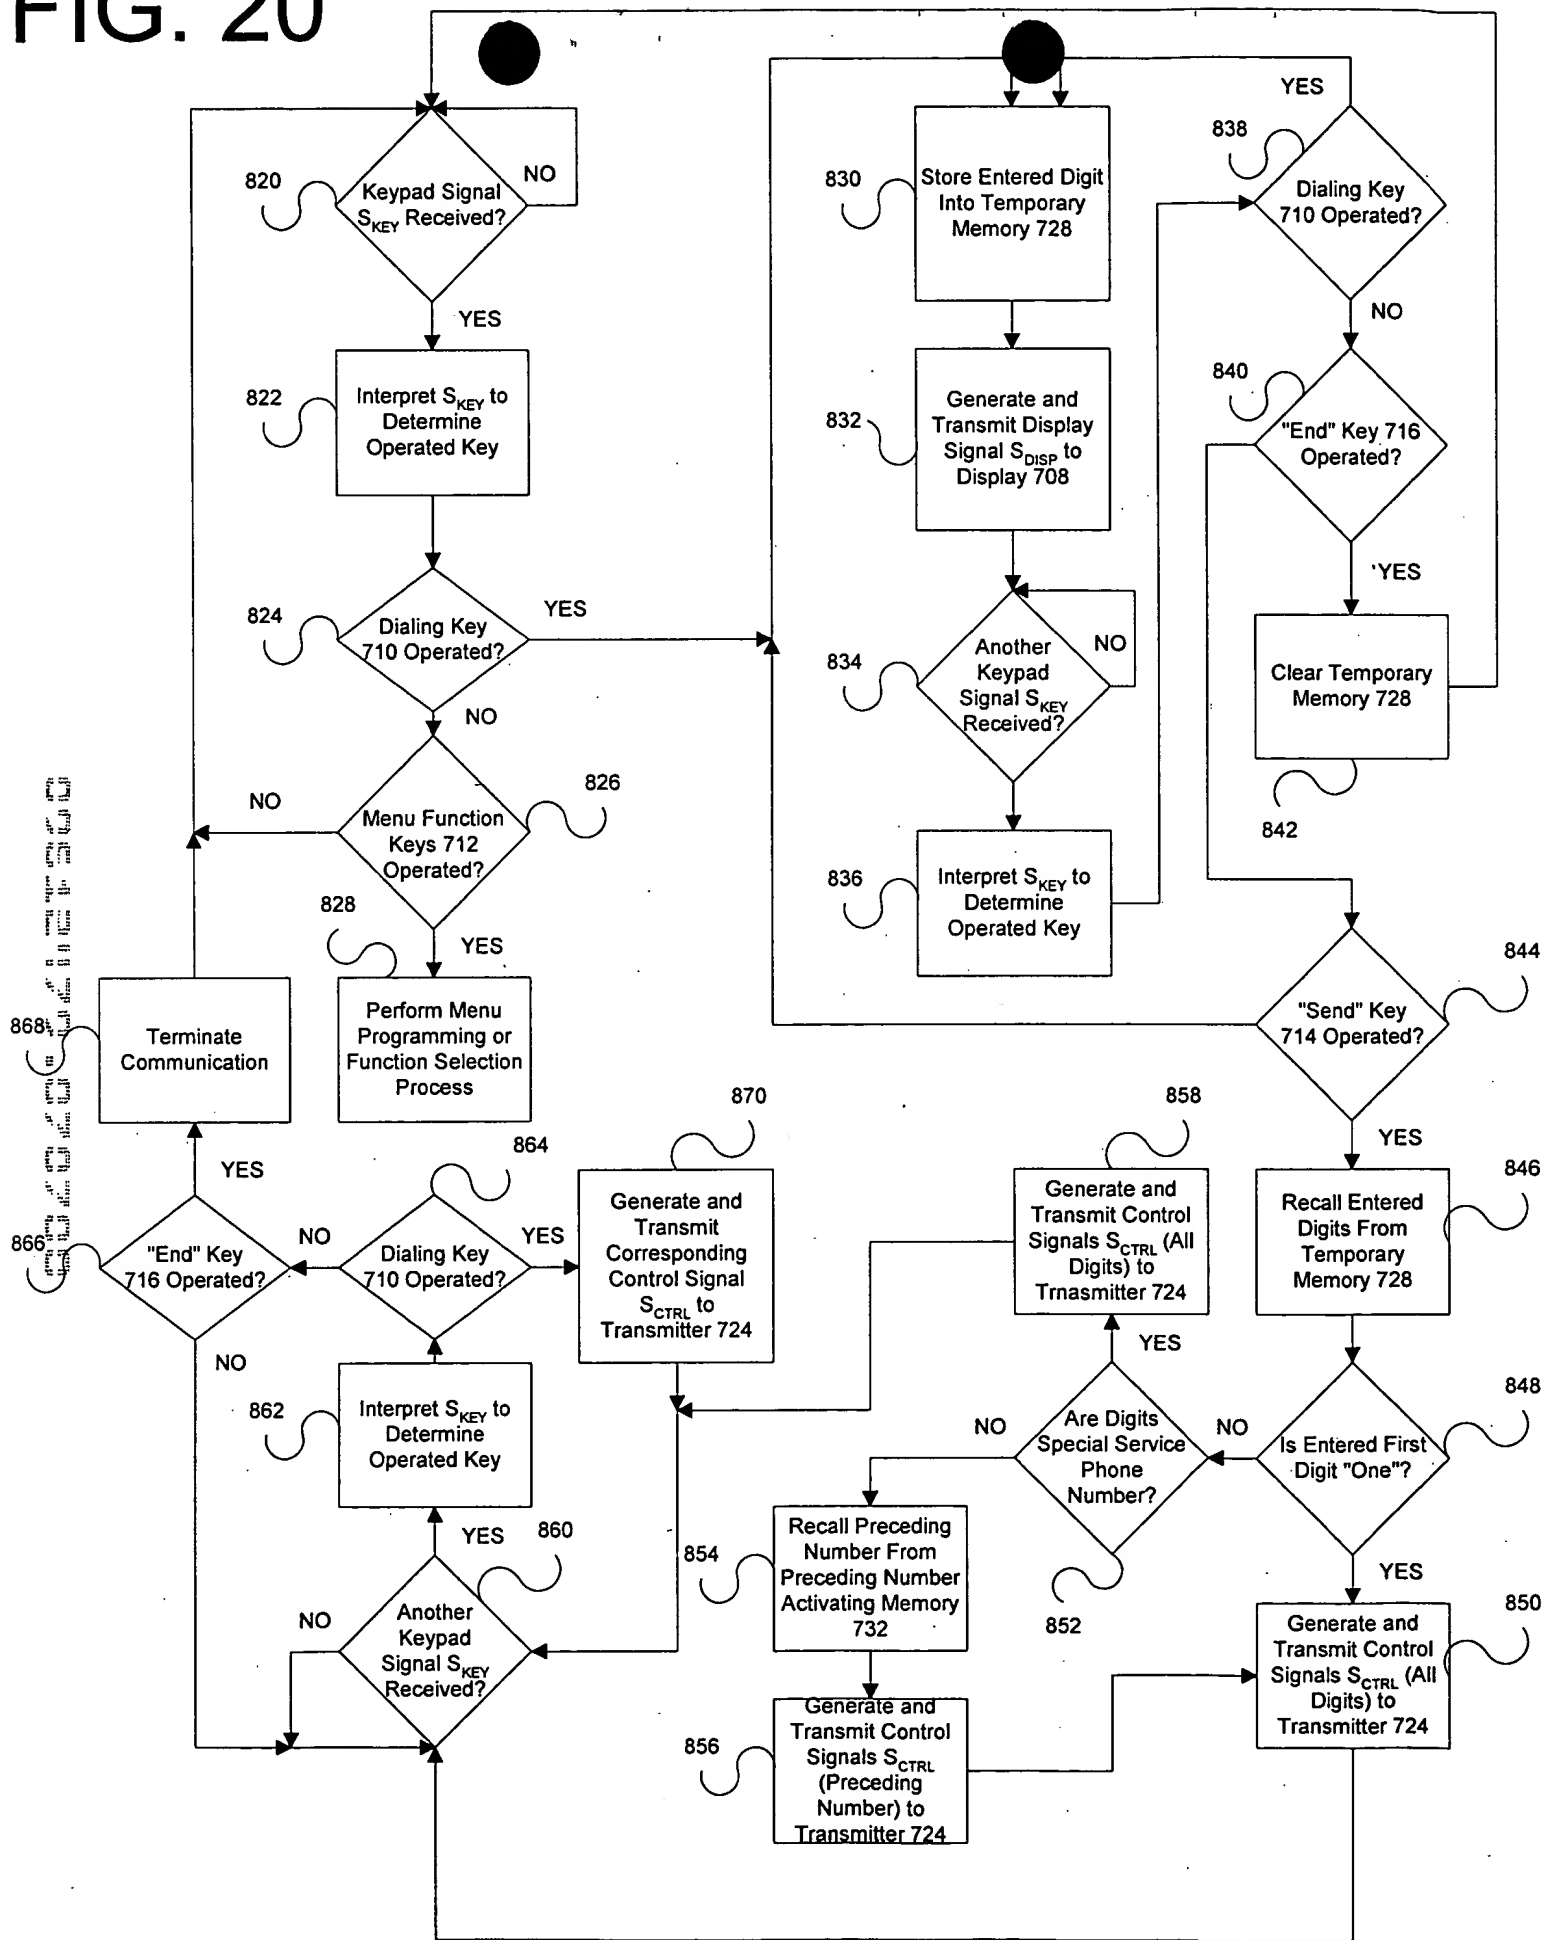


FIG. 21

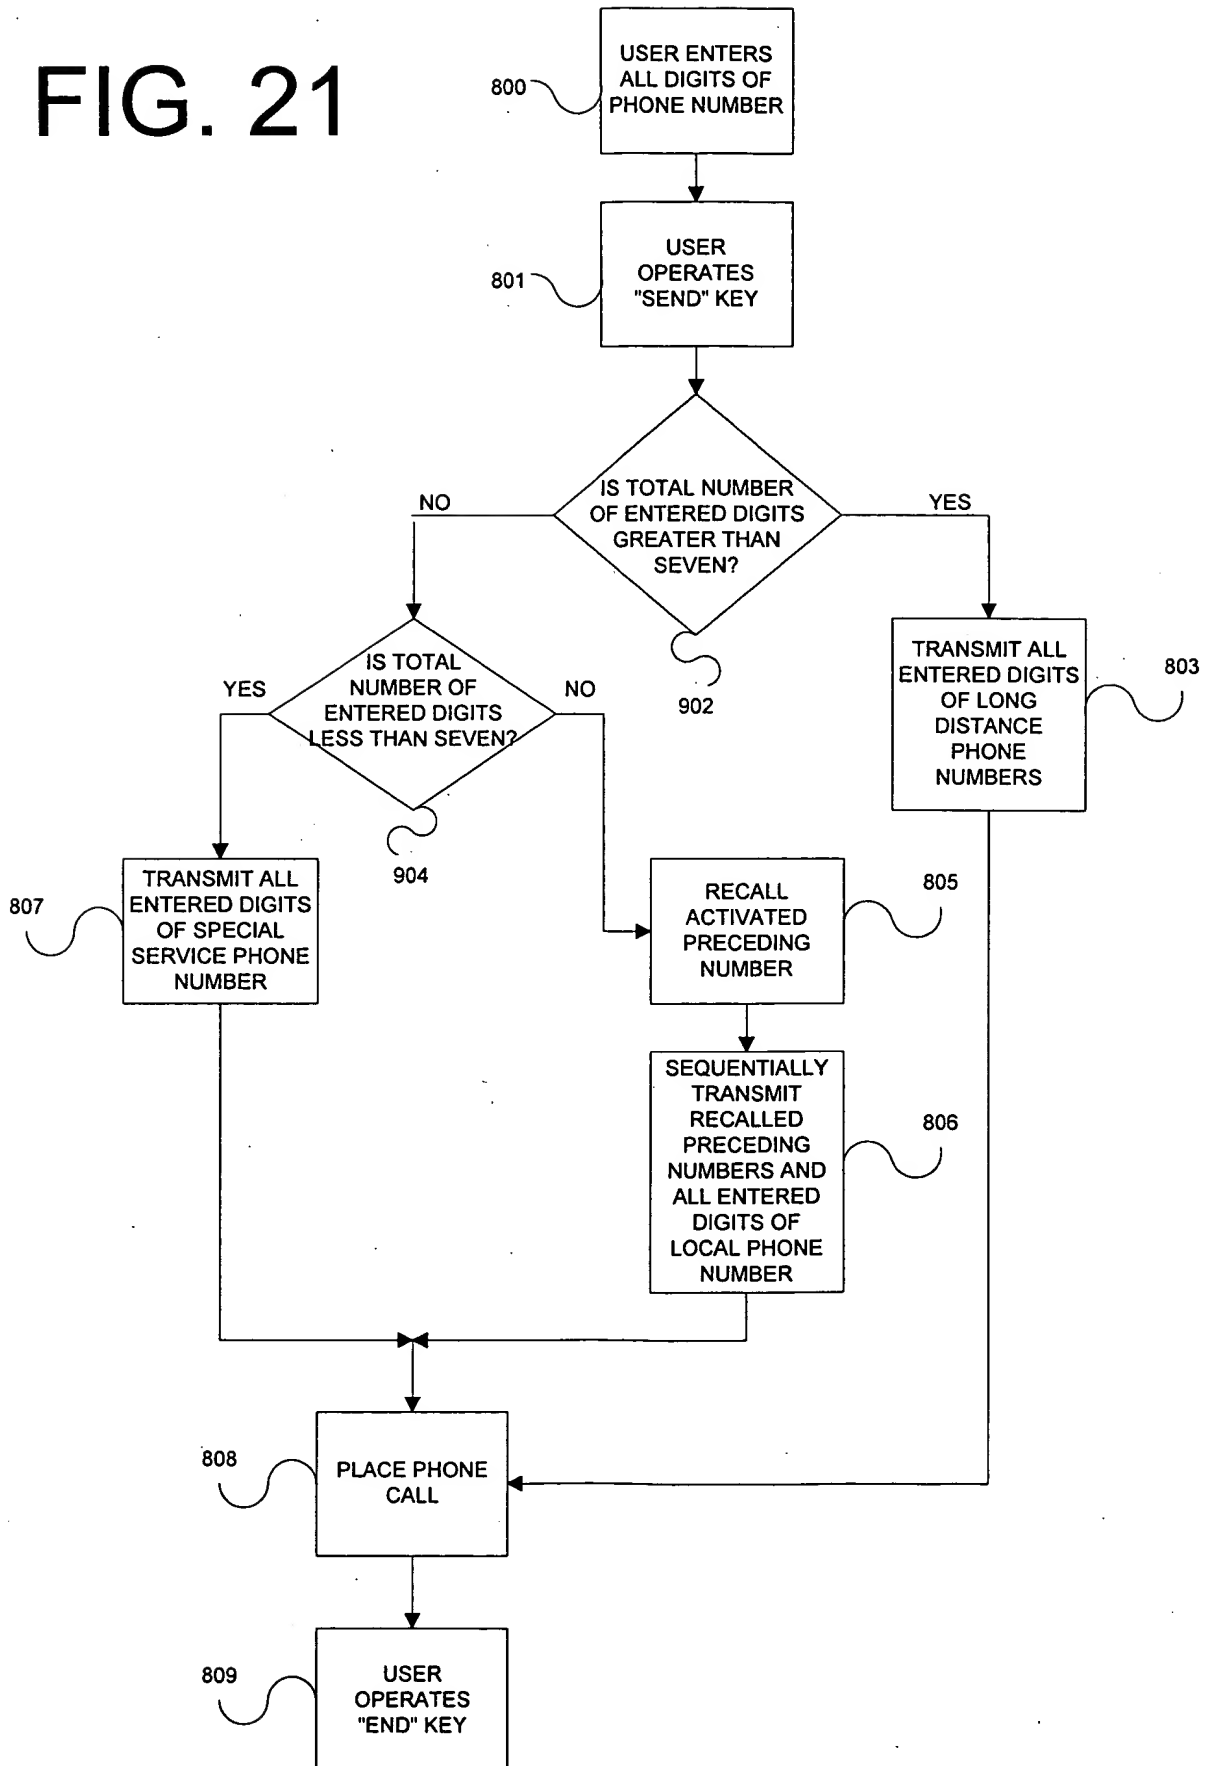


FIG. 22

